

# Maestro Heritage Software Tools

## **USER MANUAL**

Rev. 1.3



## REVISION HISTORY

Rev.	Date	Details	Originated by
1.0	1 Mar2008	First release	Wallace Lee
1.1	22Sep2008	Update for software ver. 091d	Wallace Lee
1.2	18MAY2009	Update for software ver. 092	Wallace Lee
1.3	3DEC2009	Update for software ver. 092f	Wallace Lee

This manual is written without any warranty.

**Maestro Wireless Solutions Ltd.** reserves the right to modify or improve the product and its accessories which can also be withdrawn without prior notice.

Besides, our company stresses the fact that the performance of the product as well as accessories depends not only on the proper conditions of use, but also on the environment around the places of use.

**Maestro Wireless Solutions Ltd.** assumes no liability for damage incurred directly or indirectly from errors, omissions or discrepancies between the modem and the manual.

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

## TABLE OF CONTENTS

<b>CHAPTER 1: INTRODUCTION .....</b>	<b>6</b>
<b>CHAPTER 2: HERITAGE PLUGIN SETUP AND COMMANDS.....</b>	<b>7</b>
1. Selecting Plug-in.....	7
2. AT commands for I/Os on I/O Plug-in Board and CGPS Plug-in Board 8	
a. AT+IOBR command .....	8
b. AT+IOBW command .....	8
c. AT+IOBOR command .....	9
3. AT commands for CGPS Plug-in Board.....	10
a. AT+NMEA command .....	10
b. AT+CGPSSTART command .....	10
c. AT+CGPSSTOP command .....	11
d. AT+CGPSSTANDBY command.....	12
e. AT+AGPS command.....	12
f. AT+GPSPOS command .....	13
4. AT commands for Ethernet Plug-in Board .....	14
a. AT+ETHRST command .....	14
<b>CHAPTER 3: GPRS AND TCP/UDP PARAMETERS SETUP.....</b>	<b>15</b>
1. GPRS Network Parameters .....	15
a. AT+IPGPRS command .....	15
b. AT+IPCONNECT command .....	16
2. TCP/UDP Parameters Setup .....	16
a. AT+IPTCP command .....	16
b. AT+IPUDP command.....	18
c. AT+IPBUFF command .....	19
3. Extra TCP/UDP Parameters Setup.....	20
a. AT+IPOPT command .....	20
<b>CHAPTER 4: AUTOMATIC AND SELF-RECOVERY TCP/UDP CONNECTION.....</b>	<b>22</b>
1. Flow diagram of Auto TCP/UDP connection function .....	23
2. AT commands for Auto TCP/UDP connection .....	24
a. AT+AUTOTCP command .....	24
b. AT+AUTOUDP command.....	25
3. AT commands for tuning Auto TCP/UDP connection.....	26
a. AT+AUFM command.....	26
<b>CHAPTER 5: AT COMMAND DRIVEN TCP/UDP CONNECTION</b>	<b>27</b>
1. AT commands for Auto TCP/UDP connection .....	27
a. AT+DLEMODE command.....	27
b. AT+AOTCP command .....	28
c. AT+OUDP command .....	28
<b>CHAPTER 6: PING SERVICE.....</b>	<b>30</b>
1. AT command for setting up and execute ping.....	30
a. AT+IPPING command .....	30
<b>CHAPTER 7: DYNAMIC DNS.....</b>	<b>32</b>
1. Description of the Operation.....	32
2. AT command for configuring Dynamic DNS .....	33
a. AT+IPDDNSSERV command .....	33
b. AT+IPDDNSACCT command .....	33
c. AT+IPDDNSUPD command.....	34

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

<b>CHAPTER 8: TCP TERMINAL .....</b>	<b>36</b>
1. Description of the Operation .....	36
2. AT command for TCP Terminal .....	36
a. AT+TCPTERM command .....	36
<b>CHAPTER 9: EMAIL SENDING (SMTP) SERVICE.....</b>	<b>38</b>
1. Description of the Operation .....	38
2. AT command for email sending .....	38
a. AT+IPSMTP command .....	38
b. AT+EMADDR command .....	39
c. AT+EMSUBJ command .....	40
d. AT+EMBODY command .....	41
e. AT+EMSEND command .....	42
<b>CHAPTER 10: REMOTE AT COMMAND BY SMS .....</b>	<b>44</b>
1. Description of the operation .....	44
2. AT command for configuring AT command by SMS.....	45
a. AT+SMSAT command.....	45
3. Limitation and caution to be taken when using remote AT command	45
<b>CHAPTER 11: CALL SCREENING .....</b>	<b>46</b>
1. AT commands for configuring call screening .....	46
a. AT+CSRN command .....	46
b. AT+CSNW command.....	46
c. AT+CSNR command .....	47
d. AT+CSND command .....	48
<b>CHAPTER 12: MODEM STATUS CHECK AND MONITORING ...</b>	<b>49</b>
1. AT command for Modem Status Check and Monitoring.....	49
a. AT+TMODE command .....	49
b. Operation of Modem Status Check and Monitoring.....	50
<b>CHAPTER 13: REMOTE PROGRAM UPDATE .....</b>	<b>51</b>
1. AT command for remote firmware update.....	51
a. AT+IPFTP command .....	51
b. AT+FTPDOTA command.....	52
c. AT+ADDINSTALL command.....	53
d. Notes and cautions to be taken .....	54
<b>CHAPTER 14: COMMAND STRING - INTRODUCTION .....</b>	<b>55</b>
1. Command String and "Service" Concept.....	55
<b>CHAPTER 15: COMMAND STRING – WRITING AND USING ..</b>	<b>56</b>
1. Structure of Command String .....	56
a. Service type .....	56
b. Service Id .....	56
c. Operation type and Operation argument .....	56
2. Concatenating Command String.....	56
3. Entering and executing Command String.....	57
a. AT+CSTR command.....	57
b. AT+CSTRSET command.....	57
<b>CHAPTER 16: COMMAND STRING – SERVICES .....</b>	<b>59</b>
1. Alarm Service.....	59
a. Alarm Service Command String Syntax and explanation.....	59
b. Reading Alarm Service status .....	59
2. Counter Service.....	60
a. Counter Service Command String Syntax and explanation.....	60

b.	Reading Counter Service status .....	60
3.	Countdown Timer Service .....	60
a.	Countdown Timer Service Command String Syntax and explanation	60
b.	Reading Countdown Timer status.....	61
4.	Input Port Service.....	61
a.	Input port Service Command String Syntax and explanation.....	61
b.	Input Port operation mechanism (single I/P triggering) .....	62
c.	Input Port operation mechanism (multiple I/P triggering) .....	63
d.	Reading I/P Port status.....	63
5.	Output Port Service.....	64
a.	Output Port Service Command String Syntax and explanation.....	64
b.	Reading O/P Port status.....	64
6.	SMS Service.....	64
a.	SMS Service Command String Syntax and explanation.....	64
b.	Using "variable" options within SMS content.....	65
7.	Email Sending Service .....	66
a.	Email Sending Service Command String Syntax and explanation .	66
b.	Using "variable" options within additional email content .....	67
c.	Reading Email Sending Service status .....	67
8.	Device Power Control Service .....	68
a.	Device Power Control Service Command String Syntax and	
	explanation.....	68
b.	Reading Device Power Control status.....	69

**CHAPTER 17: COMMAND STRING –READING STATUS OF SERVICES ..... 70**

1.	Command for reading current information of Services .....	70
a.	AT+CSTRSTAT command .....	70
b.	Reading Alarm Service .....	70
c.	Reading Counter Service .....	71
d.	Reading Countdown Timer Service .....	71
e.	Reading Input Pin Service.....	71
f.	Reading Output Pin Service.....	71
g.	Reading Device Power Control Service .....	71
h.	Reading Email Sending Service.....	71

**CHAPTER 18: KNOWN ISSUES ..... 72**

1.	AT +WIND command.....	72
2.	Saving of parameters to non-volatile memory .....	72
3.	Mutually exclusive TCP/UDP functions .....	72
4.	Sending Heritage Software commands over SMS.....	72

**CHAPTER 19: QUESTIONS AND ANSWERS ..... 73**

1.	AutoTCP/UDP .....	73
2.	AT command driven TCP/UDP connection .....	73
3.	Remote AT command by SMS .....	73
4.	Command String Feature .....	73

**CHAPTER 20: EXAMPLES OF HERITAGE SOFTWARE SETUP AND OPERATION ..... 74**

1.	To setup a Automatic TCP connection.....	74
2.	To make a AT command driven TCP connection .....	74
3.	To setup periodic ping .....	75
4.	To setup TCP Terminal and Dynamic DNS automatic update .....	75



5.	Perform Remote program update by sending Command over SMS	.76
6.	Command String programming example 1.....	76
7.	Command String programming example 2.....	76
8.	Command String programming example 3.....	77
9.	Command String programming example 4.....	77
<b>CHAPTER 21: COMMAND STRING QUICK REFERENCE .....</b>		<b>78</b>

## CHAPTER 1: INTRODUCTION

Heritage Software Tools is a set of software solutions for Maestro Heritage modem. New functions added to increase application range of various industrial and automated applications:

- AT commands specific for individual plug-in boards
- Automatic and self-recovery TCP/UDP socket connection
- AT command driven TCP/UDP socket connection
- Ping Service
- Dynamic DNS (\* note)
- Email sending (SMTP)
- Remote AT command through SMS and TCP Terminal (\* note)
- Call screening (reject call made by unauthorized phone number)
- Modem status check and monitoring
- Remote program updating
- “Command String” programming scripts
- Remote program updating

Users can configure and use the above features by following this document.

*Note: Special GPRS service from network recommended. See Chapter 7 and 8 for details*

## CHAPTER 2: HERITAGE PLUGIN SETUP AND COMMANDS

Maestro Heritage allows different hardware plug-in boards to be connected to the expansion slot to enhance functionality. In software side there are commands to configure and control different plug-in boards.

### 1. Selecting Plug-in

#### AT+HPLUGIN command

Description: This command is used to setup Heritage with individual hardware plug-in board.

Command Syntax: AT+HPLUGIN=<type>

Response Syntax: +HPLUGIN: <type>

Command	Possible responses:
AT+ HPLUGIN=?	+HPLUGIN: 1 OK <i>Note: show current settings</i>
AT+ HPLUGIN=2	OK <i>Note: use plug-in #2 (CGPS)</i>
AT+ HPLUGIN=?	+HPLUGIN: (1-4) OK <i>Note: possible values</i>

#### Defined Values:

<type>

Plug-in type

- 1 I/O plug-in board (default value)
- 2 CGPS plug-in board
- 3 reserved
- 4 Ethernet plug-in board

Note:

- After changing the <type> value the modem will reset immediately.
- Modem will not detect and check if +HPLUGIN value match with actual plug-in , user should make sure entering is correct



## 2. AT commands for I/Os on I/O Plug-in Board and CGPS Plug-in Board

**NOTE:** An optional I/O or CGPS plug-in board is needed to plug to Heritage for using this Service. Contact Maestro Wireless for information. For details please read the I/O Plug-in Board user guide.

### a. AT+IOBR command

This command is to read the value of one or all Input Pins on the plug-in board.

**Command Syntax:**

AT+IOBR [(=<pin>)]

**Response syntax:**

+IOBR: <val><val><val><val><val><val>

+IOBR: <pin>,<val>

Command	Possible responses:
AT+IOBR	+IOBR: 000000 OK <i>Note : read all input pins values</i>
AT+IOBR=1	+IOBR: 1,0 OK <i>Note : read the value of input pin #1</i>
AT+IOBR=?	+IOBR[: (1-6)] OK <i>Note: possible values</i>

**Defined Values:**

<pin>

ID of the Input Pin to be read. Valid value is from 1 to 6 for I/O plug-in and 1 to for CGPS plug-in. If omitted all Input Pins will be read

<val>

Current value (status) of the Input Pin:

0 input signal not detected

1 input signal detected

Note:

1. Number of displayed or possible Input Pin value depends on plug-in type chose.
2. If no <pin> argument is entered , then all Input Pins values will be read and the result is displayed as a series '0' or '1', representing the value for input #1 to #6 from left to right.
3. Always read Plug-in Board user manual before wiring to avoid permanent damage to the board

### b. AT+IOBW command

This command is to set (write) the value of one or all Output Pins on the I/O plug-in or CGPS plug-in.

**Command Syntax:**

AT+IOBW= <val><val><val><val><val><val>

AT+IOBW= <pin>,<val>

**Response syntax:**

OK

Command	Possible responses:
AT+IOBW=111111	OK <i>Note : set all six output pins to value "1"</i>
AT+IOBW=000001	OK <i>Note : set Output pins #1 to 5 to "1", #6 to '0'</i>
AT+IOBW=6,0	OK <i>Note: set Output pin #6 to '0' (others not changed)</i>

**Defined Values:**

**<pin>**

ID of the Output Pin to be set. Valid value is from 1 to 6.

**<val>**

Value (output) value of the pin to be set:

- 0 Output Pin is opened
- 1 Output Pin is closed (shorted)

**Note:**

1. Number of displayed or possible output pin value depends on plug-in type chose.
2. You can only set one of all or all Output Pins in one command.
3. To set all Output Pins at one time, enter command with a set of digits (only 0 or 1 is allowed, total number of digits is same as number of Output Pins available) to set the state of each Output Pin respectively.
4. Always read Plug-in Board user manual before wiring to avoid permanent damage to the board.

### c. AT+IOBOR command

This command is to read the last value of one or all Output Pins on the plug-in board.

**Command Syntax:**

AT+IOBOR [(=<pin>)]

**Response syntax:**

+IOBOR: <val><val><val><val><val><val>

+IOBOR: <pin>,<val>

Command	Possible responses:
AT+IOBOR	+IOBOR: 000000 OK <i>Note : read all output pins values</i>
AT+IOBOR=1	+IOBOR: 1,0 OK <i>Note : read the value of output pin #1</i>
AT+IOBOR=?	+IOBOR[: (1-6)] OK <i>Note: possible values)</i>

**Defined Values:**

**<pin>**

ID of the Output Pin to be read. Valid value is from 1 to maximum number of Output Pin available on the plug-in. If omitted all Output Pins will be read

**<val>**

Current value (status) of the Output Pin:

- 0 Output Pin is set to 0 (open)
- 1 Output Pin is set to 1 (closed)

Note:

1. Number of displayed or possible Output Pin value depends on plug-in type chose.
2. If no <pin> argument is entered , then all Output Pins values will be read and the result is displayed as a series '0' or '1', representing the value of Output from #1 to #last from left to right.
3. Always read Plug-in Board user manual before wiring to avoid permanent damage to the board

### 3. AT commands for CGPS Plug-in Board

**NOTE: An optional C-GPS plug-in board is needed to plug to Heritage for using this Service. Contact Maestro Wireless for information. For details please read the C-GPS Plug-in Board user guide.**

#### a. AT+NMEA command

This command is set if NMEA frames should not be sent out to com port or not.

**Command Syntax:**

AT+NMEA =<val>

**Response syntax:**

+NMEA: 1

Command	Possible responses:
AT+NMEA=1	OK <i>Note : enable NMEA frames to be sent</i>
AT+NMEA?	+INMEA: 1 OK <i>Note : read current value</i>
AT+NMEA=?	+NMEA: (0-2) OK <i>Note: possible values</i>

**Defined Values :**

<val>

- 0 no NMEA frames will be sent out
- 1 NMEA frames will be sent out to the com port
- 2 Reserved

**Note:**

1. You can only set the +NMEA value BEFORE starting the CGPS Plug-in otherwise you will get error message. See section of +CGPS command for starting CGPS.
2. The command will not check if CGPS Plug-in is present or not. NMEA frames will come out a while after CGPS is started. If no CGPS Plug-in present no NMEA frame will be come out.

#### b. AT+CGPSSTART command

This command is to start running CGPS Plug-in Board.

**Command Syntax:**

AT+CGPSSTART=<type>

**Response syntax:**

OK

Command	Possible responses:
AT+CGPSSTART	OK <i>Note : start running CGPS Plug-in (default is HOT start)</i>
AT+CGPSSTART="COLD"	OK <i>Note : start running CGPS Plug-in (COLD start)</i>
AT+CGPSSTART=?	+CGPSSTART: (HOT,WARM,COLD,FACTCOLD,SIMCOLD),(AGPSON,AGPSOFF) OK <i>Note :possible values</i>
AT+CGPSSTART?	+CGPSSTART: HOT, AGPSON OK <i>Note :read current value</i>

**Defined Values :**

<type>

- "HOT" start with all previous run data (previous run should end with AT+CGPSSTANDBY command). This will expect the fastest fixing.
- "WARM" start with previous run data, except position sigma is high (prev. run should end with AT+CGPSSTOP command)
- "COLD" start with NO previous run data, except drift estimate
- "FACTCOLD" start with Factory Defaults instead of previous run data (almanac data, no drift estimate)
- "SIMCOLD" start with no change to previous run data area - needed for Simulator runs

**Note:**

1. The argument will be saved automatically. and CGPS will be restarted automatically after power-off/on cycle. To prevent CGPS start running on next power up please use AT+CGPSSTOP command

### c. AT+CGPSSTOP command

This command is to stop running CGPS Plug-in Board.

**Command Syntax:**

AT+CGPSSTOP

**Response syntax:**

OK

Command	Possible responses:
AT+CGPSSTOP	OK <i>Note : stop running CGPS Plug-in</i>
AT+CGPSSTOP?	+CGPSSTOP: STATE IS OFF OK <i>Note : check current CGPS state</i>

**Note:**

1. This command will stop CGPS clock and next CGPS start need to be "WARM" or "COLD" type. If want to re-start CGPS with "HOT" option please use AT+CGPSSTANDBY command

#### d. AT+CGPSSTANDBY command

This command is to set CGPS Plug-in Board in standby mode. This consumes slightly more power, but allows for faster restarts when the CGPS plug-in is restarted with the CGPSSTART command. Note: when doing a "HOT" start (see +CGPSSTART command), the previous session should be stopped with this command

**Command Syntax:**

AT+CGPSSTANDBY

**Response syntax:**

OK

Command	Possible responses:
AT+CGPSSTANDBY	OK <i>Note : set CGPS Plug-in in standby mode</i>
AT+CGPSSTANDBY?	+CGPSSTANDBY: IN STANDBY MODE OK <i>Note : check current CGPS standby state</i>

**Note:**

1. This command will NOT stop CGPS clock and next CGPS start can "HOT" type (faster to fix). If want to stop CGPS to save more power please use AT+CGPSSTOP command

#### e. AT+AGPS command

This command is to enable or disable using AGPS feature for faster GPS fix. When enabled Heritage will use GPRS service to download Satellite data thru Internet (about 3Kbyte each time) to shorten GPS fix time. Make sure the +IPGPRS setting is properly set before using AGPS feature.

**Command Syntax:**

AT+AGPS=<val>

**Response syntax:**

OK

Command	Possible responses:
AT+AGPS=1	OK <i>Note : enable AGPS feature</i>
AT+AGPS=0	OK <i>Note : disable AGPS feature</i>
AT+AGPS?	+AGPS: 1 OK <i>Note : check current AGPS standby state</i>

**Defined Values :**

<val>

- 0 AGPS is disabled
- 1 AGPS is enabled

**Note:**

1. The +AGPS setting should be made before starting running CGPS by +CGPSSTART command.

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

2. Make sure the GPRS service is available and the +IPGPRS setting is properly set.
3. The program will self-control the AGPS functionality. Once AGP is needed it will try downloading new satellite data (about 3Kbytes) thru GPRS. The need of downloading is determined by internal program and may be taken time to time.
4. AGPS operation is silent : e.g. if GPRS is not available it will not should any message
5. User can use AT+AGPSSTATUS command to check current AGPS status.

## f. AT+GPSPOS command

This command allows getting the last position information received.

### Command Syntax:

AT+GPSPOS

### Response syntax:

+GPSPOS:<fix>, <time>, <date>, <latitude>, <longitude>, <altitude>, <hdop>, <speed>, <course>, <nbsat>

Command	Possible responses:
AT+GPSOPS	+GPSPOS: 1,225454,192294,4916.45N,12311.12W,111.1,0.9,25.5,180.0,06 OK <i>Note : see defined values</i>
AT+GPSPOS	+GPSPOS: -1,,,,,,,,,0 OK <i>Note : see defined values</i>

### Defined Values :

#### <fix>

- 0 Invalid Fix
- 1 2D fix
- 2 3D fix
- 1 It is not possible to define a position

#### <time>

hhmmss time of fix, ranges of values: hh (hour) 00 to 23, mm (minute) 00 to 59, ss (second) 00 to 59  
Example: 225454 means 22:54:54 UTC

#### <date>

ddmmyy date of fix, ranges of values: dd (day) 01 to 31, mm (month) 01 to 12, yy (year) 2000 to 2099  
Example: 191194 means November 19th of 1994

#### <latitude>

ddmm.mmmm(N/S) ranges of values: dd (degree) 00 to 90, mm.mmmm (minute) 00,0000 to 59.9999, (N/S) North or South  
Example: latitude of the fix- 4916.45N means 49 degree 16.45 min North

#### <longitude>

dddmm.mmmm(E/W) ranges of values: dd (degree) 00 to 180, mm.mmmm (minute) 00,0000 to 59.9999, (E/W) East or West  
Example: longitude of the fix – 12.311.12W means 123 degree 11.12 min West

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

**<altitude>**

mmmm.m altitude of fix in meter

**<hdop>**

mmm.mm: horizontal dilution of position in meter

**<speed>**

ssss.s Speed over ground, in kilometers per hour

**<course>**

dddmm.mmmm course in degree, minute, ranges of values: ddd (degree) 000 to 360  
mm.mmmm (minute) 00.0000 to 59.9999

**<nbsat>**

nn number of satellites in view

## 4. AT commands for Ethernet Plug-in Board

**NOTE: An optional Ethernet plug-in board is needed to plug to Heritage for using this Service. Contact Maestro Wireless for information. For details please read the Ethernet Plug-in Board user guide.**

### a. AT+ETHRST command

This command is to configure the periodic reset function of Heritage and Ethernet Plug-in board. If set the Heritage will perform a soft reset periodically with period set with this command.

**Command Syntax:**

AT+ETHRST =<min>

**Response syntax:**

+ETHRST: 1

Command	Possible responses:
AT+ETHRST=0	OK <i>Note : disable periodic reset function</i>
AT+ETHRST=360	OK <i>Note : enable periodic reset function with period of 360 minutes</i>
AT+ETHRST?	+ETHRST: 360 OK <i>Note : read current value</i>
AT+ETHRST=?	+ETHRST: (0-1500) OK <i>Note: possible values</i>

**Defined Values :**

**<min>**

Period of reset in minutes. If set to 0 the periodic reset is disabled. Default value is 1440 (24 hours).

**Note:**

1. This reset function and AT+ETHRST command is function only when Ethernet Plug-in is selected (+HPLUGIN=4).
2. Once enabled this reset is unconditional. Make sure the device connected to the Ethernet Plug-in is able to handle the disconnection of Ethernet connection and can reconnect automatically.

## CHAPTER 3: GPRS AND TCP/UDP PARAMETERS SETUP

The Automatic and AT command driven TCP/UDP connection, PING service, DDNS support (described in Chapter 4,5,6,7 and 8) requires GPRS connection and TCP / UDP parameters setup. This chapter will describe those required setups.

### 1. GPRS Network Parameters

User need to enter the following parameters for GPRS connection:

- Access point name (APN)
- User name
- Password

They are to be entered by using **AT+IPGPRS** command. Contact your network operator for these parameters.

#### a. AT+IPGPRS command

##### Description:

This command is used to setup GPRS network parameters for the TCP/UDP connection feature.

##### Command Syntax

AT+IPGPRS=<Cid>,<APN>,<UN>,<PW>

##### Response Syntax

+IPGPRS: <Cid>,<APN>,<UN>,<PW>

Command	Possible responses:
AT+ IPGPRS?	+IPGPRS: 1,"INTERNET","","" OK <i>Note: show current settings</i>
AT+ IPGPRS=1,	OK <i>Note: set Cid value to 1</i>
AT+ IPGPRS =1,"INTERNET"	OK <i>Note: set the PDP value to 1 and APN to "INTERNET"</i>
AT+ IPGPRS=?	+IPGPRS: (1-4),(100),(50),(50) OK <i>Note: possible values</i>

##### Defined Values :

<Cid>

PDP context identifier

Note: to use with TCP/UDP connection feature this value must be set to 1.

<APN>

Access point name of the GPRS network. Max 100 characters.

<UN>

User name to access the GPRS service. Max 50 characters.

<PW>

Password used to access the GPRS service. Max 50 characters.



## b. AT+IPCONNECT command

This command is to make the modem to activate or deactivate GPRS connection. Once IPCONNECT is success you can perform TCP/UDP connection as described on other chapters. Please read note below on using this command.

### Command Syntax

AT+IPCONNECT = <Bearer>,<Connect>

### Response Syntax

+IPCONNECT: <Bearer>,<Connect>

Command	Possible responses:
AT+ IPCONNECT=?	+IPCONNECT: (0-1) , (0-1) OK <i>Note: display possible values</i>
AT+ IPCONNECT?	+IPCONNECT: 1,0 OK <i>Note: display current status</i>
AT+IPCONNECT=1,1	OK OK OK <i>Note: Activate GPRS connection success</i>
AT+IPCONNECT=1,1	+CME ERROR: 3 <i>Note: Activate GPRS connection fail</i>
AT+ IPCONNECT =1,0	OK <i>Note: Deactivate GPRS connection success</i>

### Defined Values:

#### <Bearer>

0: using GSM Bearer ( Note: do NOT use this )

1: using GPRS Bearer.

#### <Connect>

0: to stop connection

1: to start connection.

**Note:** Before you connect to GPRS by this command make sure you have finished the following first:

1. Entered APN settings by AT+IPGPRS command Chapter 3.1.a)
2. It is suggested after modem power up wait about 20 seconds before making GPRS connection.

## 2. TCP/UDP Parameters Setup

For using automatic or AT command driven TCP/UDP connection (described in Chapter 5 and 6), you need to first enter the target TCP/UDP peer parameters. There are:

- AT+IPTCP
- AT+IPUDP
- AT+IPBUFF

### a. AT+IPTCP command

This command specifies the TCP socket parameters and mode that to be used by automatic or AT command driven TCP connection (described in Chapter 4 and 5).

**Command Syntax**

AT+IPTCP=<port>,<mode>,<server>,<TCPTxDelay>

**Response Syntax**

+ IPTCP: <port>,<mode>,<server>,<TCPTxDelay>

Command	Possible responses:
AT+ IPTCP?	+IPTCP: 0,"S", "",0 OK <i>Note : show current settings</i>
AT+ IPTCP =23	OK <i>Note: set the TCP port to 23</i>
AT+ IPTCP =23,"C",202.144.111.222",0	OK <i>Note: to set the modem to connect TCP socket Client (caller) mode to target :address 202.144.111.222 and port 23</i>
AT+ IPTCP =23,"S",255.255.255.255",0	OK <i>to set the modem to wait for TCP socket connection request (Server (listening) mode) any calling IP address allowed, port 23</i>
AT+ IPTCP =?	+IPTCP: (0-65535),("C","S"),(120),(0-1) OK <i>Note : possible argument</i>

**Defined Values:**

**<port>**

The port number has to be used for the TCP socket connection. Default value is 0. Valid range is 0 to 65535.

**<mode>**

Mode of TCP operation. Default value is "S".

"S" Server (Listening) mode. This configures Maestro Heritage to open a listening TCP connection on the specified <port> . The TCP connection will be active upon getting socket connection request from the allowed remote TCP peer (see <address>)

"C" Client (caller) mode. This configures Maestro Heritage to request opening a TCP connection to the server with the specified <address> and <port> .

Note: This parameter is used by Auto TCP connection (see Chapter 4) only.

**<address>**

The address of the TCP server (or host). Default value is empty. Legal values could be 32-bit in dotted-decimal notation (i.e. xxx.xxx.xxx.xxx) or alphanumeric ASCII test string up to 120 characters (only if DNS is available on the GPRS network)

Note: In "Server" (Listening) mode the modem will only accept TCP connection request for the caller with address specified in the <address> field. Yet if it is set to "255.255.255.255" the modem will accept request from ANY address.

**<TCPTxDelay>**

This parameter determines if there is time delay introduced before sending a TCP frame that has not been entirely filled with user data. If it is set to 0 initiates the sending of a TCP frame as soon as possible after the reception of a single character value from the host. If it is set to 1 initiate a delay will be introduced before the sending of a TCP frame

The default value is 0.

## b. AT+IPUDP command

This command specifies the UDP socket parameters and mode that to be used by automatic or AT command driven UDP connection (described in Chapter 4 and 5).

### Command Syntax

AT+IPUDP=<port>,<mode>,<server>,<UDPTxDelay>

### Response Syntax

+ IPUDP: <port>,<mode>,<server>,<UDPTxDelay>

Command	Possible responses:
AT+ IPUDP?	+IPUDP: 0,"S", "", 0 OK <i>Note : show current settings</i>
AT+ IPUDP =23	OK <i>Note: set the UDP port to 23</i>
AT+ IPUDP =23,"C",202.144.111.222",0	OK <i>Note: to set the modem to connect UDP socket Client (caller) mode to target :address 202.144.111.222 and port 23</i>
AT+ IPUDP =23,"S",255.255.255.255",0	OK <i>to set the modem to wait for UDP socket connection request (Server (listening) mode) any calling IP address allowed, port 23</i>
AT+ IPUDP=?	+IPUDP: (0-65535),("C","S"),(120),(0-1) OK <i>Note : possible argument</i>

### Defined Values:

#### <port>

The port number has to be used for the UDP socket connection. Default value is 0. Valid range is 0 to 65535.

#### <mode>

Mode of UDP operation. Default value is "S".

"S" Server (Listening) mode. This configures Maestro Heritage to open a listening UDP connection on the specified <port> . The UDP connection will be active upon getting socket connection request from the allowed remote UDP peer (see <address>)

"C" Client (caller) mode. This configures Maestro Heritage to request opening a UDP connection to the server with the specified <address> and <port>.

**Note:** This parameter is used by Auto UDP connection (see Chapter 3) only.

#### <address>

The address of the UDP server (or host). Default value is empty. Legal values could be 32-bit in dotted-decimal notation (i.e. xxx.xxx.xxx.xxx) or alphanumeric ASCII test string up to 120 characters (only if DNS is available on the GPRS network)

Note: In "Server" (Listening) mode the modem will only accept UDP connection request for the caller with address specified in the <address> field. Yet if it is set to "255.255.255.255" the modem will accept request from ANY address.

**<UDPTxDelay>**


This parameter determines if there is time delay introduced before sending a UDP frame that has not been entirely filled with user data. If it is set to 0 initiates the sending of a UDP frame as soon as possible after the reception of a single character value from the host. If it is set to 1 initiate a delay will be introduced before the sending of a UDP frame  
The default value is 0.

**c. AT+IPBUFF command**

This command specifies the number of bytes of payload data from remote peer buffered inside the modem when automatic or AT command driven TCP / UDP connection is made.

- If the quantity of buffered data reaches this value, the whole buffered data will be sent out to the serial port.
- If the data from remote is large enough at one time, only multiple of this value data will be sent out to the serial port remainder will be kept inside buffer.

Example: AT+IPBUFF=5

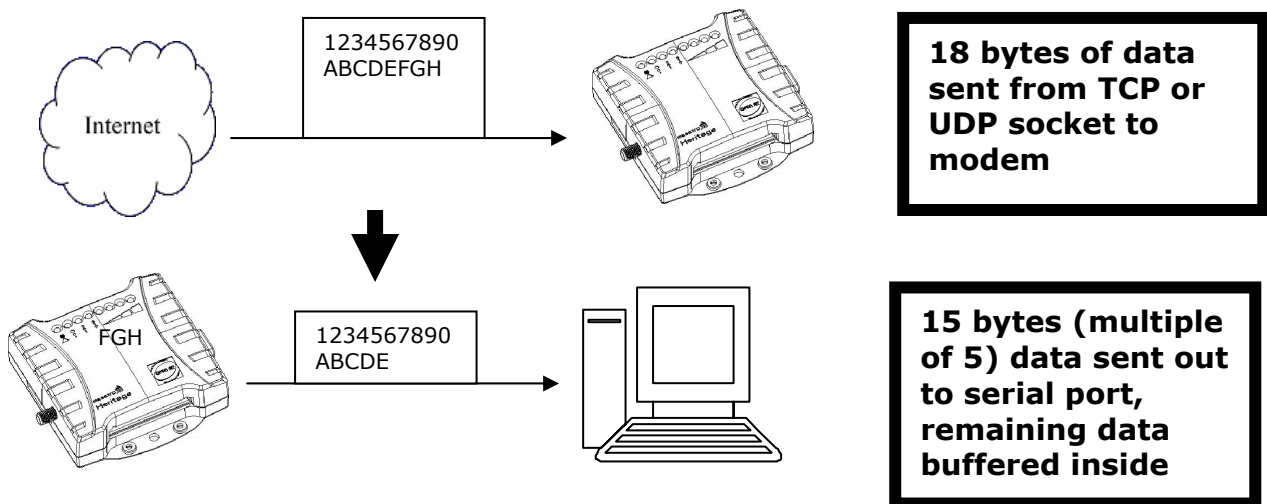

**Command Syntax**

AT+IPBUFF = <buff>

**Response Syntax**

+IPBUFF: <buff>

Command	Possible responses:
AT+ IPBUFF=?	+IPBUFF: 0-100 OK <i>Note: display possible values</i>
AT+ IPBUFF?	+IP BUFF: 0 OK <i>Note: display current status</i>
AT+IPBUFF = 5	OK <i>Note: Set IPBUFF value to 5</i>

**Defined Values:**

<buff>

The number of bytes of data to be buffered. Default value is 0 (i.e. no buffering). Valid range is 0 to 100.

**Note:** If the TCP or UDP socket connection is broken, buffered data will be lost.

### 3. Extra TCP/UDP Parameters Setup

User can set additional parameters of TCP/UDP connection, including “keep alive” packet, maximum packet size and TTL.

#### a. AT+IPOPT command

This command specifies the extra TCP/UDP socket parameters.

**Command Syntax**

AT+IPOPT=<CMDType>,<parameter>[,action>]

**Response Syntax**

+ IPOPT: <CMDType>,<parameter>[,<action>]

Command	Possible responses:
AT+ IPOPT?	+IPOPT: 1, 0 +IPOPT: 2, 536 +IPOPT: 3, 64 +IPOPT: 4,0,0 OK <i>Note: display current settings</i>
AT+ IPOPT =1,1	OK <i>Note: enable the keep alive packet feature</i>
AT+IPOPT=2,512	OK <i>Note: set the size of maximum packet that to be sent to 512 bytes</i>
AT+ IPOPT=3,128	OK <i>Note: set TTL to 128</i>
AT+IPOPT=4,60,1	OK <i>Note: Enable Ping action every 60 seconds, if ping fail then disconnect GPRS</i>
AT+ IPOPT=?	+IPOPT: (1-4),(0-65535)[,(0-2)] OK <i>Note : possible argument</i>

**Defined Values:**

<CMDType>

1 setup “keep alive” packet feature:

When <parameter> is 0, the feature is disabled

When <parameter> is 1 and a TCP socket connected, every 7200 seconds (2 hours) an empty “keep alive” packet will be sent out from the modem to avoid socket being closed because of idle timeout.

2 Specifies the maximum size of the outgoing packet to <parameter>. The size can be set from 1 to 65535(0xFFFF) default value is 65535.

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.



3 Specifies the TTL value of the socket connection to <parameter>. The value can be set from 1 to 255.

Default value is 128.

4 Specify weather to use ping function to check Internet connectivity:

<parameter> is the period in second of calling ping function after GPRS connected (+IPCONNECT)

<action>

to specify the action will be taken if a set of ping action fail:


- 0 do nothing (default)
- 1 disconnect GPRS (+IPCONNECT=1,0)
- 2 reset Maestro Heritage

## CHAPTER 4: AUTOMATIC AND SELF-RECOVERY TCP/UDP CONNECTION


The Auto TCP/UDP connection feature is defined for accessing serial devices over the Internet. Heritage can be configured that after power up it will connect to a remote TCP/UDP socket (client mode) or to wait for the TCP/UDP socket connection request from remote peer (server mode).

If the socket connection is unsuccessful or disconnected it will repeat the connection request and back to waiting stage. This make remote peer can access serial device connected to Maestro Heritage.


### Direct serial connection

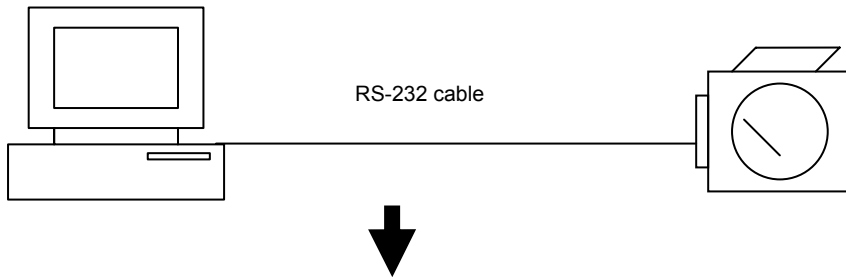

### TCP Socket connection via the Internet /GPRS network

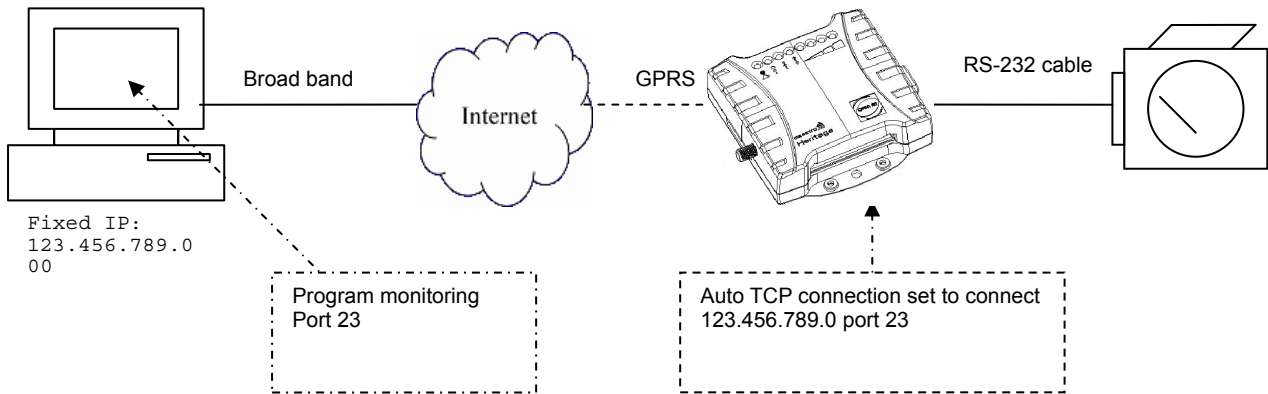

# 1. Flow diagram of Auto TCP/UDP connection function

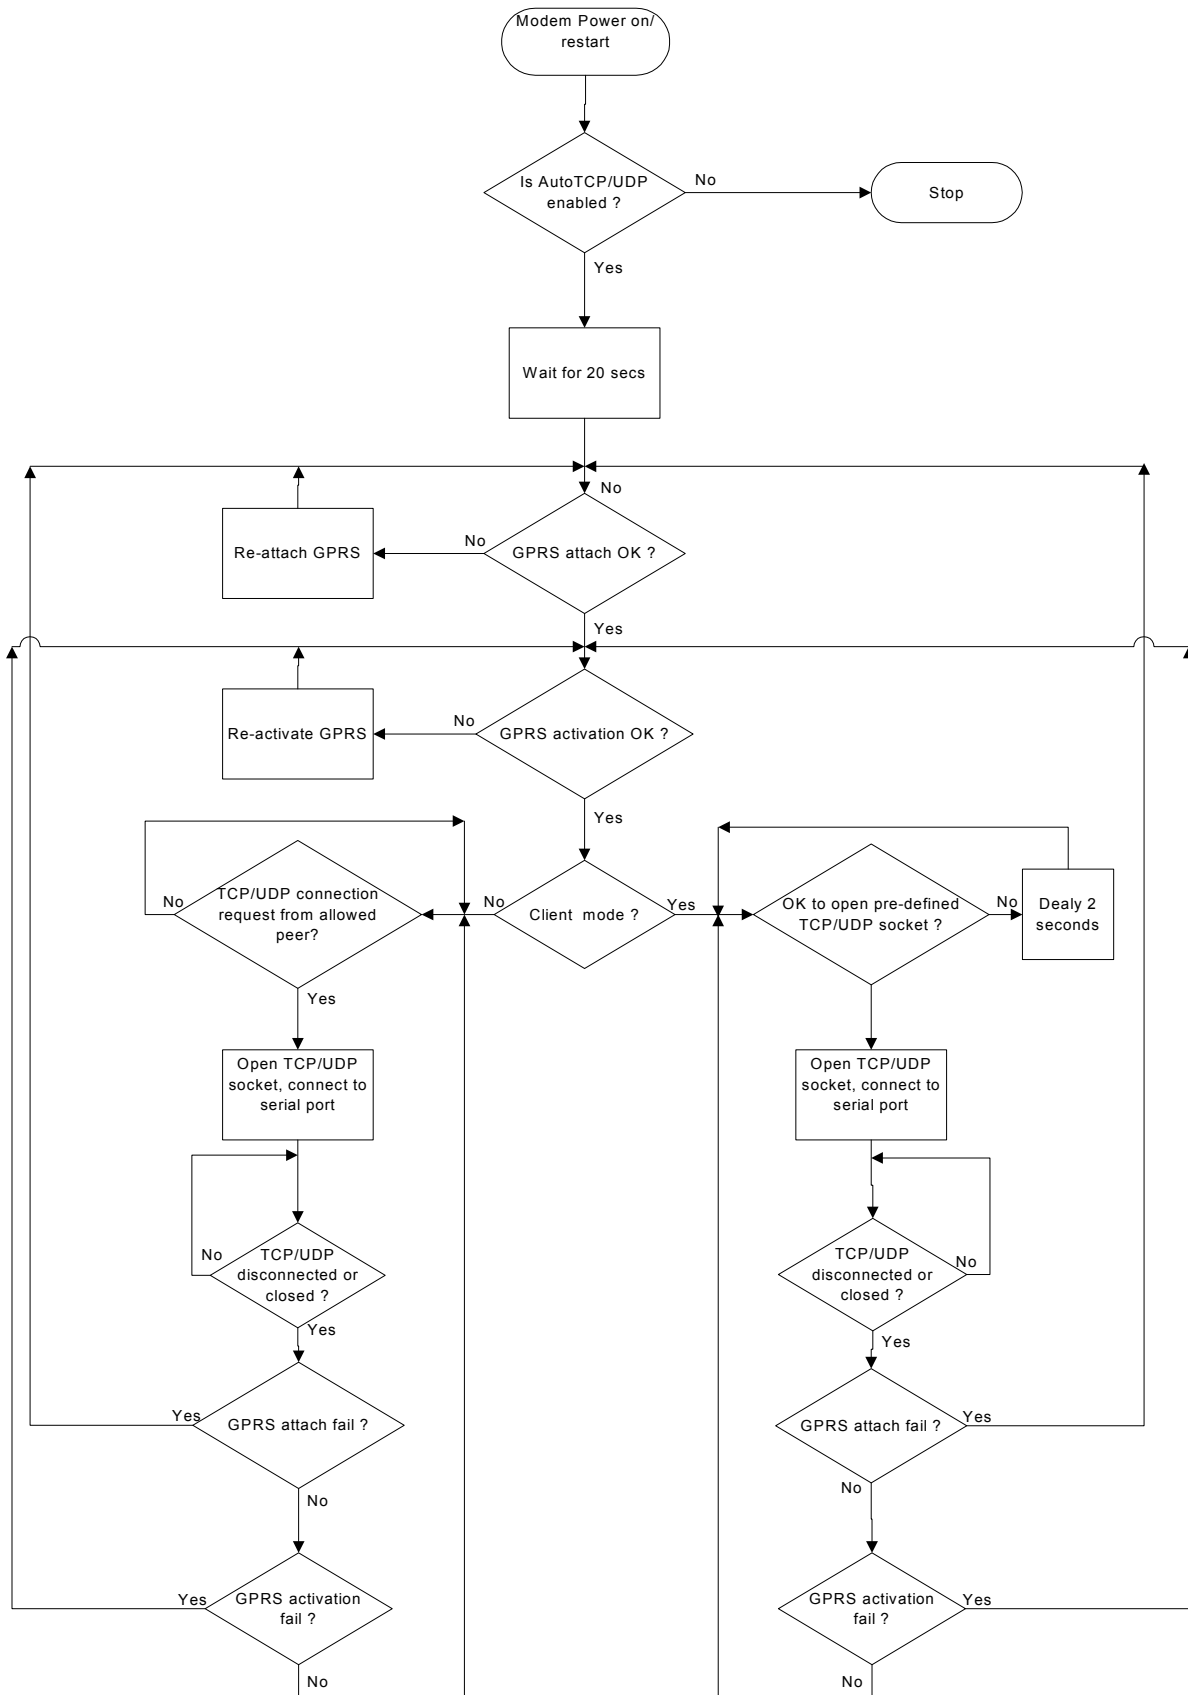

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.



## 2. AT commands for Auto TCP/UDP connection

### a. AT+AUTOTCP command

This command controls the Heritage to start TCP socket connection automatically. Before using AT+AUTOTCP TCP and GPRS settings MUST be setup properly using AT+IPTCP and AT+IPGPRS command respectively.

#### Command Syntax

AT+AUTOTCP=<mode>

#### Response syntax:

+AUTOTCP: <mode>

Command	Possible responses:
AT+AUTOTCP=0	OK <i>Note : disable AutoTCP</i>
AT+AUTOTCP=1	OK <i>Enable AutoTCP</i>
AT+ AUTOTCP?	+AUTOTCP : 1 OK <i>Note display current status</i>
AT+AUTOTCP=?	+AUTOTCP : (0-1) <i>Note : possible argument</i>

#### Defined Values:

<mode>

- 1 enable auto TCP
- 0 disable auto TCP

#### Note:

- Before enabling Auto TCP, it **MUST** be properly set the GPRS settings by AT+IPGPRS command and TCP settings by AT+IPTCP command (see Chapter 3)
- **ONLY** GPRS PDP context # 1 will be used. So please setup +IPGPRS settings with <cid>=1
- Once AutoTCP is enabled, it will start the TCP socket connection automatically after 20 seconds.
- Once the TCP connection is established successfully, the serial port will go to data mode, all data entered to the serial port will be sent to remote TCP peer. No more AT commands will be accepted then.
- In TCP connected data mode, the DSR and DCD signals of the serial port will go to high.
- If the TCP connection is broken the modem will try to reconnect automatically. During re-connection period serial port will go back to command mode, and DSR/DCD signal back to low.
- The setting will be saved, and after power off, the AUTOTCP will be restarted with the 20 seconds delay after power up.
- To stop auto TCP connection, you need to enter the command AT+AUTOTCP=0 by either 1: within 20 seconds after power up, or 2: during reconnection (serial port back to command mode), or 3: by SMS (see Chapter, SMS AT commands)
- Auto TCP connection is exclusive to other TCP/UDP feature. See Chapter 12 (Q&A)

## b. AT+AUTOUDP command

This command controls the Heritage to start UDPacket connection automatically.  
Before using AT+AUTOUDP TCP and GPRS settings **MUST** be setup properly using AT+IPUDP and AT+IPGPRS command respectively.

### Command Syntax

AT+AUTOUDP=<mode>

### Response syntax:

+AUTOUDP: <mode>

Command	Possible responses:
AT+AUTOUDP=0	OK <i>Note : disable AutoUDP</i>
AT+AUTOUDP=1	OK <i>Note: Enable AutoUDP</i>
AT+ AUTOUDP?	+AUTOUDP : 1 OK <i>Note: display current status</i>
AT+AUTOUDP=?	+AUTOUDP : (0-1) <i>Note : possible argument</i>

### Defined Values:

<mode>

- 1 enable auto UDP
- 0 disable auto UDP

### Note:

- Before enabling Auto UDP, it **MUST** be properly set the GPRS settings by AT+IPGPRS command and UDP settings by AT+IPUDP command
- **ONLY** GPRS PDP context # 1 will be used. So please setup +IPGPRS settings with <cid>=1
- Once AutoUDP is enabled, it will start the UDP socket connection automatically after 20 seconds.
- Once the UDP connection is established successfully, the serial port will go to data mode, all data entered to the serial port will be sent to remote UDP peer. No more AT commands will be accepted then.
- In UDP connected data mode, the DSR and DCD signals of the serial port will go to high.
- If the UDP connection is broken the modem will try to reconnect automatically. During re-connection period serial port will go back to command mode, and DSR/DCD signal back to low.
- The setting will be saved, and after power off, the AUTOUDP will be restarted with the 20 seconds delay after power up.
- To stop auto UDP connection, you need to enter the command AT+AUTOUDP=0 by 1: within 20 seconds after power up, or 2: during reconnection (serial port back to command mode) or 3: by SMS (see Chapter , SMS AT command).
- Auto TCP connection is exclusive to other TCP/UDP feature. See Chapter 18 (Q&A)
- Due to the nature of UDP socket connection, AT+AUTOUDP=0 may not be able to disconnection. in this case you may send command AT+IPCONNECT=1,0 to disconnect GPRS connection.

### 3. AT commands for tuning Auto TCP/UDP connection

#### a. AT+AUFCM command

This command controls the buffering time of TDP/UDP data sent to remote peer. Data coming towards UART will be buffered for a “delay” period before being sent out.

##### Command Syntax

AT+AUFCM=<delay>

##### Response syntax:

+AUFCM: <delay>

Command	Possible responses:
AT+AUFCM=1	OK <i>Note : set the +AUFCM value to 1</i>
AT+ AUFCM?	+AUFCM : 2 OK <i>Note: display current status</i>
AT+AUFCM=?	+AUFCM : (1-255) <i>Note : possible argument</i>

##### **Defined Values:**

<delay>

Default value: 0

Possible value: 1 to 255

Delay units between sending buffered data to TCP/UDP peer. The actual delay time is calculated by the value of <delay> times 18.5 ms. So if <delay> is equal to 2 that means data will be sent to remote peer every 39ms (or immediately if internal buffer is full) Increasing this value can make the data packet size bigger especially when data flow is slow, thus reducing overhead.

##### **Note:**

If the value is set too high the maximum data transfer speed may be decreased.

## CHAPTER 5: AT COMMAND DRIVEN TCP/UDP CONNECTION

This feature let user to make a TCP or UDP connection upon the **AT+OTCP** or **AT+OUDP** command.

This socket connection feature does support DLE/ETX character coding. See 5.1.a

The **AT+OTCP** and **AT+OUDP** operation is similar to **AT#OTCP** and **AT#OUDP** function provided original IP Connectivity. See IP connectivity document.

Make sure you have made the GPRS connection by **AT+IPCONNECT** command before making socket connection (see Chapter 17, setup examples).

### 1. AT commands for Auto TCP/UDP connection

#### a. AT+DLEMODE command

When performing the AT command driven TCP or UDP socket connection, the attached host has the choice to code or not the ETX character.

When DLEMODE is set to 0, no specific process is needed on ETX characters. It means that it is not possible for a host to request an end of connection or to receive a clear indication of end of connection from the TCP/IP stack.

When DLEMODE is set to 1, the ETX character means a request or an indication of end of connection.

As a consequence, ETX characters that belong to the payload data must be sent by the host on the serial port preceded by a DLE character. Similarly ETX characters received by the TCP/IP stack from the Internet are sent to the host through the serial port preceded by a DLE character “ETX” is character hex 03, “DLE” character is hex 10 (Dec 16)

Default value is 0.

#### Command Syntax

AT+DLEMODE=<mode>

#### Response syntax:

+DLEMODE: <mode>

Command	Possible responses:
AT+ DLEMODE =0	OK <i>Note : disable DLEMODE</i>
AT+ DLEMODE =1	OK <i>Note: Enable DLEMODE</i>
AT+ DLEMODE?	+DLEMODE : 1 OK <i>Note: display current status</i>
AT+ DLEMODE =?	+DELMODE : (0-1) <i>Note : possible argument</i>

#### **Defined Values:**

<mode>

- 1 enable DLEMODE
- 0 disable DLEMODE

#### **Note:**

DLEMODE is not available for Automatic TCP/UDP connection.

## b. AT+AOTCP command

This command is sent by the attached host to open a TCP connection to the TCP server specified by the **AT+IPCTP** command. If socket connection is made successfully it will response CONNECT 115200 and the serial port will go to data mode, all data entered to the serial port will be sent to remote TCP/UDP peer.

If socket connection is unsuccessful or socket is disconnected afterwards the modem will send out NO CARRIER message and back to command mode.

### Command Syntax:

AT+OTCP

### Response syntax:

CONNECT 115200

Command	Possible responses:
AT+ OTCP	CONNECT 115200 <i>Note : TCP connection made successfully</i>
AT+ OTCP	+CME ERROR 3 <i>Note: fail, either IPCONNECT is not ready or socket service is used already</i>
AT+ OTCP	NO CARRIER <i>Note: possibly remote server no response</i>

### **Note:**

AT+OTCP connection is exclusive to other TCP feature. See Chapter (Q&A)

If TCP connection is unsuccessful or broken after connection the GPRS connection will also be disconnected. (+IPCONNECT: 1,0). So please enter AT+IPCONNECT=1,1 to reconnect GPRS before entering AT+OTCP.

## c. AT+OUDP command

This command sent by the attached host to open a UDP connection to the UDP server specified by the **AT+IPUDP** command. If socket connection is made successfully it will response CONNECT 115200 and the serial port will go to data mode, all data entered to the serial port will be sent to remote UDP peer.

If socket connection is unsuccessful or socket is disconnected afterwards the modem will send out NO CARRIER message and back to command mode.

### Command Syntax:

AT+OUDP

### Response syntax:

CONNECT 115200

Command	Possible responses:
AT+ OUDP	CONNECT 115200 <i>Note : UDP connection made successfully</i>
AT+ OUDP	+CME ERROR 3 <i>Note: fail, either IPCONNECT is not ready or socket service is used already</i>
AT+ OUDP	NO CARRIER <i>Note: possibly remote server no response</i>



**Note:**

- AT+OUDP connection is exclusive to other TCP/UDP feature. See Chapter 18 (Q&A)
- If UDP connection is unsuccessful or broken after connection the GPRS connection will also be disconnected. (+IPCONNECT: 1,0). So please enter AT+IPCONNECT=1,1 to reconnect GPRS before entering AT+OUDP.
- Due to the nature of UDP socket connection, sending ETX characters (when DLEMODE is 1) may not be able to make disconnection.

## CHAPTER 6: PING SERVICE

This feature is to make a ping (ICMP Echo Request) to a specified IP address and get back the echo result. Ping service can also be called by IPCONNECT as a tool to check Internet connection. See AT+IPOPT command in Chapter 3 for details.

### 1. AT command for setting up and execute ping

#### a. AT+IPPING command

##### Command Syntax:

AT+SMSAT=<mode>(,<key>)

AT+IPPING= <mode>,<address>, <nb>, <delay>, <timeout>

##### Response syntax:

+IPPING : ,<address>, time=<echo time>

Command	Possible responses:
AT+IPPING=2, "210.103.11.18" ,3,1,15	OK <i>Note : configure ping target (210.103.11.18), 3 ping trials total, 1 second between each trial, timeout limit 15</i>
AT + IPPING	+IPPING : "210.103.11.18", time=562ms +IPPING : "210.103.11.18", time=662ms +IPPING : "210.103.11.18", time=762ms OK <i>Note: Execute ping action (no argument)</i>
AT+IPPING=?	+IPPING: (0-2),(15),(1-10),(1-10),(1-60) OK <i>Note : Possible arguments</i>
AT+IPPING?	+IPPING: "210.103.11.18", 3, 1, 15 OK <i>Note: Display current status</i>

##### **Defined Values:**

<mode>

0,1 reserved

2 configure ping address and parameters below

<address >

IP address of the target to be pinged. Must be in form of dot-decimal notation (xxx.xxx.xxx.xxx).

<nb>

Numbers of ping trials for each ping action. E.g. if the value is 3 will ping the target for 3 times. Default value is 3. Valid range is 1 to 10. (When used with IPCONNECT check the ping is assumed fail if all ping trails fail.)

<delay>

Time in second between each ping trial.

Default value is 3. Valid range is 1 to 10.



**Note :**

- Ping target must be in dot-decimal notation format, URL format is not supported.
- Before making command driven ping action (AT+IPPING w/o argument) make sure GPRS is connected (+IPCONNECT: 1,1) and ping target and parameters are set properly.



## CHAPTER 7: DYNAMIC DNS

**To use this feature, we strongly suggest getting special GPRS service from your network operator:**


**a. Network will assign a true public IP address to Heritage upon GPRS activations, and**

**b. that GPRS connection allows incoming access from public Internet to Heritage**

This feature lets Heritage to login to certain Dynamic DNS service providers, to update the hostname with Heritage current IP address. So user can access Heritage with pre-registered hostname. User can use this function together with “TCP Terminal” (see Chapter 8 ) and can use Telnet to access Heritage and send AT command over Internet.

Maestro Wireless Solution Ltd does not have affinity with any Dynamic DNS service providers. Maestro Wireless Solution Ltd does not guarantee any service provided by DDNS service providers and not liable to any loss or damage caused by such service.

### 1. Description of the Operation

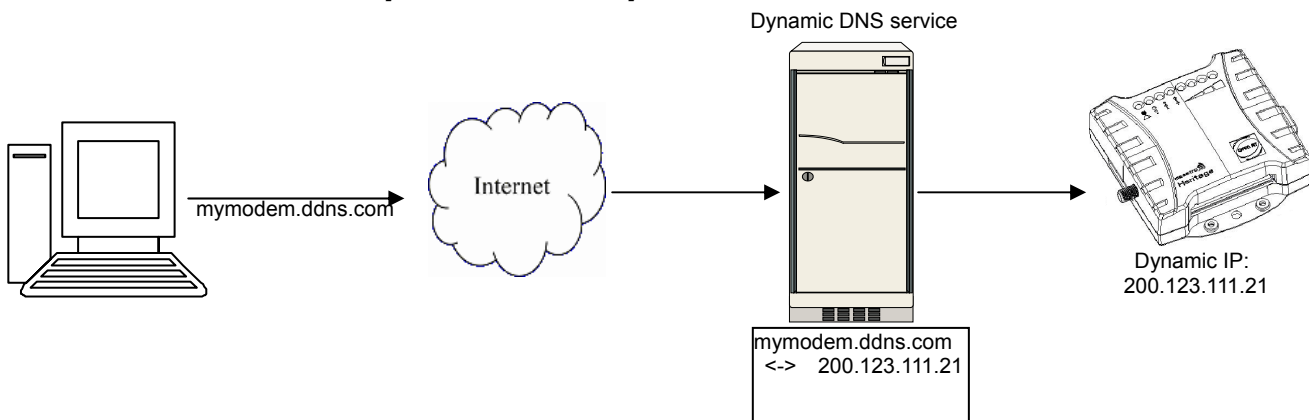

1. User need to create an account on DDNS service providers and register a hostname. Following providers are tested working correctly:  
www.dyndns.com  
www.no-ip.com
2. Use AT+IPDDNSSERV command to enter DDNS update server URL and port no. Use AT+IPDDNSACCT to enter own account login, password and hostname.
3. When IPCONNECT is ready, use AT+IPDDNSUPD command to update the above hostname with modem’s current IP address.
4. User can also use AT+IPDDNSUPD command to configure automatic DDNS update upon each time of IPCONNECT established

## 2. AT command for configuring Dynamic DNS

### a. AT+IPDDNSSERV command

**Command Syntax:**

AT+IPDDNSSERV=<serv\_url>,<serv\_port>

**Response syntax:**

+IPDDNSSERV:<serv\_url>,<serv\_port>

OK

Command	Possible responses:
AT+IPDDNSSERV="members.dyndns.org",80	OK <i>Note : enter DDNS service provider's update server information</i>
AT+IPDDNSSERV?	+IPDDNSSERV: "members.dyndns.org",80 OK <i>Note display current status</i>
AT+IPDDNSSERV=?	+IPDDNSSERV: (64),(0-65535) OK <i>Note : Possible arguements</i>

**Defined Values:**

<serv\_url>

URL of the update server. For example it is "members.dyndns.org" for www.dyndns.com. Check with your DDNS service provider for correct name.

<serv\_port >

Port number of the update server. For example it is 80 or 8080 for www.dyndns.com. Check with your DDNS service provider for correct port number..

List of parameters of verified DDNS service providers

Provider	<serv_url>	<serv_port>
<a href="http://www.dyndns.com">www.dyndns.com</a>	members.dyndns.org	80
<a href="http://www.no-ip.com">www.no-ip.com</a>	dynupdate.no-ip.com	80

### b. AT+IPDDNSACCT command

**Command Syntax:**

AT+IPDDNSACCT=<hostname>,<login>,<passwd>

**Response syntax:**

OK

Command	Possible responses:
AT+IPDDNSACCT="12345678.dyndns.org", "maestro", "maestro"	OK <i>Note : enter DDNS account and host name info</i>
AT+IPDDNSACCT?	+IPDDNSACCT: "12345678.dyndns.org", "maestro", "maestro" OK <i>Note display current status</i>
AT+IPDDNSACCT=?	+IPDDNSACCT: (64),(32),(32) OK <i>Note : Possible arguements</i>

**Defined Values:**

**<hostname>**

Hostname to be associated with M100's IP address. Should register the hostname in your account and verified it on your DDNS service provider. Maximum length is 64 characters.

**<login >**

Login name of the DDNS service account. Maximum length is 32 characters.

**<psswd >**

Login password of the DDNS service account. Maximum length is 32 characters.

**c. AT+IPDDNSUPD command**

**Command Syntax:**

AT+IPDDNSUPD

AT+IPDDNSUPD= <auto\_upd>

**Response syntax:**

OK

+IPDDNSUPD: <result>, <ret\_code>

Command	Possible responses:
AT+IPDDNSUPD=1	OK <i>Note : enable automatic DDNS update</i>
AT+IPDDNSUPD=0	OK <i>Note : disable automatic DDNS update</i>
AT+IPDDNSUPD	+IPDDNSUPD: 1, "good 203.111.111.111" OK <i>Note : perform DDNS update, successful</i>
AT+IPDDNSUPD	+IPDDNSUPD: 3, "badauth" OK <i>Note : perform DDNS update,unsuccessful</i>
AT+IPDDNSUPD?	+IPDDNSUPD: 3, "badauth" OK <i>Note : display current setting: automatic DDNS update disabled result of last DDNS update since power up</i>
AT+IPDDNSUPD=?	+ IPDDNSUPD: (0-1) OK <i>Note : Possible arguements</i>

**Defined Values:**

**< auto\_upd >**

0    disable automatic DDNS update

1    enable automatic DDNS update (see notes for details)

**<result >**

result of DDNS update process. it is related to the return code of DDNS update server. if <result> is 1 or 2 the update is assumed successful .

**< ret\_code >**

return code of DDNS update server.



Following table list the relationship between <result> and <ret\_code>.

Result	1	2	3	4	5	6	7	8	9	10	11
Ret_code	good	no_chg	badauth	donator	notfqdgn	Nohost	numhost	abuse	badagent	dnserr	911

Visit Website of DDNS service providers for the explanation of return code.

**Note :**

- If the DDNS update process fails because of failure to get server response the <result> maybe a negative value, contact Heritage to get details.
- Before making command driven ping action (AT+IPPING w/o argument) make sure GPRS is connected (+IPCONNECT: 1,1) and ping target and parameters are set properly.
- If automatic DDNS update enabled, Heritage will detect GPRS connection and start DDNS update once connection is established. If update is fail it will retry for 3 times maximum. User can enter AT+IPDDNSUPD? to check the result of last update result.

## CHAPTER 8: TCP TERMINAL


**To use this feature, we strongly suggest getting special GPRS service from your network operator :**

- a. Network will assign a true public IP address to Heritage upon GPRS activations, and**
- b. that GPRS connection allows incoming access from public Internet to Heritage**

This feature lets Heritage 100 can be connected through TCP channel, and AT commands can be sent over this channel. User can use Telnet type terminal service to “login” to M100 and control it by sending AT commands through the telnet.

### 1. Description of the Operation

```
Telnet - 352061000294955.dyndns.org
Connect Edit Terminal Help
password:
correct
at+cgsn
352061000294955
OK
at+vafv
M100_UAF_095_0AT316_32 May 4 200917:49:33
OK
```

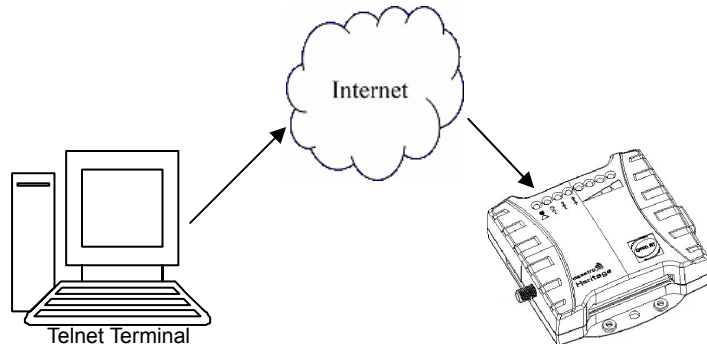

1. Uses AT+TCPTERM command to configure password port for the TCP terminal, and enable TCP terminal function.
2. After about 20 seconds Heritage will connect to the Internet automatically. And then it will check the TCP port.
3. User from outside Internet can use Telnet application to connect the port of Heritage TCP terminal. User need to know the IP address of the Heritage. Or with the aid of Dynamic DNS (Chapter) user can use the hostname associated the Heritage for connections.
4. Once connected user need to enter password. If password is correct user can send AT command to the Heritage on Telnet program.

### 2. AT command for TCP Terminal

#### a. AT+TCPTERM command

**Command Syntax:**

AT+TCPTERM =<mode>[,<psswd>,<port>,<timeout>]

**Response syntax:**

+TCPTERM =<stat>,<psswd>,<port>,<timeout>  
OK

Command	Possible responses:
AT+TCPTERM=2, "123456",23,30	OK <i>Note : configure TCP Terminal, password: 123456, port: 23, timeout:30(secs)</i>
AT +TCPTERM=1	OK <i>Note : enable TCP terminal</i>
AT+TCPTERM=0	OK <i>Note : disable TCP terminal</i>
AT+TCPTERM?	+TCPTERM: 1,"123456",23,30 <i>Note : display current status</i>
AT+TCPTERM=?	+TCPTERM: (0-1),(16),(1-65535),(1-65535) OK <i>Note : possible argument</i>

#### Defined Values:

##### <mode>

- 0 disable TCP Terminal.
- 1 enable TCP Terminal.
- 2 configure TCP Terminal parameters.

##### <psswd>

Login password for TCP Terminal. When user opens the Heritage TCP Terminal port it will prompt "password". User need to enter the password set with this parameter. User has 3 times of chance to enter correct password. If password is correct user can enter AT command otherwise TCP connection will be closed.

It can be consisting 1 to 16 alphanumeric characters. Default is "000000" (6 zeros).

##### <port>

Port number of TCP Terminal. Please do not set to the same value of port number in +IPTCP and +IPUDP command. Default is 23. Valid value is 1 to 65535.

##### <timeout >

Maximum time in second TCP terminal will wait for an entry after TCP terminal opened. If no data received in this period the connection will be closed. Default is 30. Valid value is 1 to 65535.

#### Note :

- If TCP terminal is enabled the Heritage will connect to GPRS (+IPCONNECT=1,1) about 15 seconds after power up.
- Only one TCP terminal connection can be made at a time. Any further connection requested will be refused.
- Not all AT commands could be executed. If un-allowed command is entered "command not allowed" message will be returned.
- Command echo feature is always enabled (except entering password).
- Unsolicited codes like "RING", "+CMTI", etc will not be displayed on TCP terminal.
- Never send 'interactive' AT command by SMS, e.g. AT+CMGS=.... This feature cannot return the prompt to the sender for second input.
- Always think twice before you send AT command. For example if you send AT+CPOF it will turn off the modem, and you need to go to access the modem to reset it.

## CHAPTER 9: EMAIL SENDING (SMTP) SERVICE

**To use this feature, make sure there is a SMTP server which can serve you. The network service provider may have her own dedicated SMTP server. For using other SMTP server, please check if the service connection is possible or not.**

This feature Heritage to send an email via a SMTP server. This feature can save parameters like of SMTP sever name, address of sender and recipient, email subject and email body (content). Then with AT command this function will construct and email using the above stored Information. The above information will also be used by Command String email sending service (Chapter 16.7).

### 1. Description of the Operation

1. Enter the following information by AT commands (see following sections)
  - SMTP server Information (address, port, login Info)
  - Email addresses of sender; recipient (s)
  - Email subject
  - Email body (content)

Valid “minimal” emails contain sender address and one recipient address with no subject and no content (empty email).
2. Make IP connection (see Chapter 3.1.b).
3. Use AT+EMSEND command to send out email.
4. An email can contain
  - maximum up to 1024(pre-stored)+128(command line additional) characters,
  - three (sets of) recipient: "To","cc" and "bcc". Each set have 64 characters of email address(es)
  - .Subject (title) up to 128 characters, from a choice 10 pre-store subject record.

### 2. AT command for email sending

#### a. AT+IPSMTP command

This command is to set SMTP server parameters

**Command Syntax:**

AT+IPSMTP= <port>,<auth >,<server>,<id>,<pwd>

**Response syntax:**

+IPSMTP= <port>,<auth >,<server>,<id>,<pwd>

OK

Command	Possible responses:
AT+IPSMTP=25,1,"smtp.network.com","login","pssd"	OK <i>Note : setup SMTP parameter (using authentication with no encryption)</i>
AT+IPSMTP=25,0,"smtp.network.com"	OK <i>Note : setup SMTP parameter (no authentication)</i>
AT+IPSMTP?	+IPSMTP: 25,0,"smtp.network.com" OK <i>Note : display current setting</i>

AT+IPSMTP=?	+IPSMTP: (0-65535),(0-2),(120),(64),(64) OK <i>Note : Possible arguements</i>
-------------	---

**Defined Values:**

**<port>**

Port number of the SMTP server. Default value is 25.

**<auth>**

Authentication type used for authentication:

- 0 no authentication required (default)
- 1 authentication with no encryption
- 2 authentication used with encrypted username/password in MIME64 during AUTH LOGIN phase

**<server>**

IP address of SMTP server (in xxx.xxx.xxx.xxx format) or an alpha numeric string format (e.g. smtp.server.com)

Maximum 120 characters

Note: if alpha numeric string format is used, make sure the GPRS network has proper DNS service available.

**<id>**

login name of the user. Maximum 64 characters.

**<pwd>**

Password for the user. Maximum 64 characters.

### b. AT+EMADDR command

This command is to save, read and delete email addresses of sender, recipient, cc recipient and bcc recipient.

**Command Syntax:**

AT+EMADDR= <oper>,<id>,<address>

**Response syntax:**

+EMADDR : <oper><id>,<addr>

OK

Command	Possible responses:
AT+ EMADDR=0,0,"a@abc.com"	OK <i>Note: store email address id 0 (sender address)</i>
AT+ EMADDR=0,1,"b@abc.com"	OK <i>Note: store email address id1</i>
AT+ EMADDR=1,1	+EMADDR: 1, "b@abc.com" <i>Note: read stored address id 1</i>
AT+ EMADDR=2,1	OK <i>Note: erase email address id1</i>
AT+ EMADDR=?	+EMADDR: (0-2),(0-50), (64) <i>Note: possible argument</i>

**Defined Values:**

**<oper>**

Type of operation:

- 0 store email address to flash
- 1 read email address from flash
- 2 erase email address from flash



**<id>**

Identification number (id) of the email address. Valid value is 0 to 50

0 id of the sender address (mandatory)

1-50 id of recipient email address

**<addr>**

Email address to be stored

**Note:**

- The program will NOT check if the address is in valid format or not.
- Email address stored with <id>=0 can only be used as of the sender address, not recipient..
- For each <id> you can save more than one email address, separated by comma, e.g.  
**AT+EMADDR=0,1,"me@a.com , you@a.com , him@a.com"**  
But each address list limited to 64 characters.

### c. AT+EMSUBJ command

This command is to save, read and delete email subject (title).

**Command Syntax:**

AT+EMSUBJ= <oper>,<id>,<subj>

**Response syntax:**

+EMSUBJ : <oper><id>,<subj>

OK

Command	Possible responses:
AT+ EMSUBJ=0,1,"This is subj #1"	OK <i>Note: store email subject #1</i>
AT+ EMSUBJ=1,1	+EMSUBJ: 1, "This is subj #1" <i>Note: read stored email subject with &lt;id&gt;=1</i>
AT+ EMSUBJ=2,1	OK <i>Note: erase email subject with &lt;id&gt;=1</i>
AT+ EMSUBJ=?	+EMSUBJ: (0-2),(1-10), (128) <i>Note: possible argument</i>

**Defined Values:**

**<oper>**

Type of operation:

0 store email subject to flash

1 read email subject from flash

2 erase email subject from flash

**<id>**

Identification number (id) of the email subject. Valid value is 1 to 10

**<subj>**

Email subject to be stored. Maximum 128 characters for each subject.

**Note:**

- It is recommend using only alpha-numeric characters (ASCII value 32 to 127) for email subject content.

#### d. AT+EMBODY command

This command is to save, read and delete pre-stored email body (content). Up to 3 email bodies with 1024 characters max can be stored.

The <id> field is the id number of the email body to be stored. To save email body, first enter AT+EMBODY=0,<id> then <ENTER> and wait for "> " prompt.

Then simply type email body content, <ctrl-Z> (ASCII 26) to finish.

This command can be aborted using the <ESC> (ASCII 27) character when entering text.

##### **Command Syntax:**

AT+EMBODY= <oper>,<id>,<BODY>

*text is entered <ctrl-z / ESC>*

##### **Response syntax:**

+EMBODY : <oper><id>,<BODY>

*Email body entered*

OK

Command	Possible responses:
AT+ EMBODY=0,1	>
This is email body #1<ctrl-Z> <i>Note: enter email body with &lt;id&gt;=1</i>	+EMBODY: 1,21 OK <i>Note: successful stored 21 characters as email body with &lt;id&gt;=1</i>
AT+ EMBODY=0,1	>
This is email <ESC> <i>Note: press &lt;ESC&gt; to abort email body entry</i>	OK <i>Note: abort to store email body with &lt;id&gt;=1</i>
AT+ EMBODY=1,1	+EMBODY: 1 This is email body #1 OK <i>Note: read stored email body with &lt;id&gt;=1</i>
AT+ EMBODY=2,1	OK <i>Note: erase email body with &lt;id&gt;=1</i>
AT+ EMBODY=?	+EMBODY: (0-2),(1-3) <i>Note: possible argument</i>

##### **Defined Values:**

<oper>

Type of operation:

- 0 store email body to flash
- 1 read email body from flash
- 2 erase email body from flash

<id>

Identification number (id) of the email body. Valid value is 1 to 3

**Note:**

- As a standard smtp type email, the body should contain alpha-numeric characters only.
- Each email body can contain up to 1024 characters. If data entered is more than 1024 it will stop getting and saved to
- On save email body to a same <id> old body will be over written.

**e. AT+EMSEND command**

This command is send an email with pre-saved email subject(using AT+EMSUBJ command); pre-saved email body (content) (using AT+EMBODY command), plus and additional email body to pre-saved email address(es) (using AT+EMADDR command). Maximum three (group of) reipient(s) can be sent for a single email:

- standard recipient,
- carbon copy (cc) recipient,
- blind carbon copy (cc) recipient.

GPRS connection (+IPCONNECT=1,1) must to be made and smtp parameters have to be entered properly before sending email otherwise will return +CME ERROR: 3 . When finishing a result code will be returned. Result code "0" means email transferred success, otherwise there is error. See following for more explanation.

**Command Syntax:**

AT+EMSEND=<to\_id>,<cc\_id>,<bcc\_id>,<subj\_id>,<body\_id>,<add\_body>

**Response syntax:**

+EMSEND : <result>  
OK  
+CME EORR 3

Command	Possible responses:
AT+ EMSEND=1	+EMSEND: 0 OK <i>Note: minimum email (no subject and body)successfully sent email to email address stored &lt;id&gt;=1</i>
AT+ EMSEND=0,0,2	+EMSEND: 0 OK <i>Note: minimum email (no subject and body)successfully sent email to email address stored &lt;id&gt;=1 as "bcc" recipient</i>
AT+ EMSEND =1,2,3,1,1,"extra"	+ EMSEND: 0 OK <i>Note: email with subject stored with &lt;id&gt;=1; body stored with &lt;id&gt;=1 and additional body "extra" is sent to: Address with &lt;id&gt;=1 as recipient, Address with &lt;id&gt;=2 as cc recipient, Address with &lt;id&gt;=3 as bcc recipient</i>
AT+ EMSEND=1,2,3,1,1,"extra"	+CME ERROR:3 <i>Note: email sending fail (possible reason : IP not connected)</i>
AT+ EMSEND=1,2,3,1,1,"extra"	+EMSEND: 550 OK <i>email sending fail (smtp reply code: No such user here)</i>

**Defined Values:**

**<to\_id>**

Identification number (id) of the email address(es) that as a normal email recipient. Valid value is 0 to 50. ('0' or missing parameter means no recipient for this email)

**<cc\_id>**

Identification number (id) of the email address(es) that as a "carbon copy" (cc) email recipient. Valid value is 0 to 50. ('0' or missing parameter means no cc recipient for this email)

**<cc\_id>**

Identification number (id) of the email address(es) that as a "blind carbon copy" (cc) email recipient. Valid value is 0 to 50. ('0' or missing parameter means no recipient for this email)

**<subj\_id>**

Identification number (id) of the email subject. Valid value is 0 to 10. ('0' or missing parameter means no subject for this email).

**<body\_id>**

Identification number (id) of the email body (content). Valid value is 0 to 3. '0' or missing parameter means no saved body will be used for this email.

**< add\_body >**

Additional email body (content) to be sent. Maximum 128 characters can be sent. Identification **< add\_body >** will be added just after body indicated by **<body\_id>**(if available).

**<id>**

Identification number (id) of the email body. Valid value is 1 to 3

**<result>**

Result code of the email sending process:

<b>Result code</b>	<b>explanation</b>	<b>Comments / countermeasure</b>
0	Email sending successful	
-1	Reserved	Contact Maestro Wireless
-2	Reserved	Contact Maestro Wireless
-3	Smtplib setup fail	Check +IPSMTP parameters
-4	Cannot resolve smtp server/ server not found	Check +IPSMTP parameters
-5	Connect smtp server timeout	Retry later
-99	Other error	Contact Maestro Wireless
4xx – 5xx	SMTP protocol reply code	Check SMTP document (RFC 821) for explanation

**Note:**

- As a standard SMTP type email, the body should contain alpha-numeric characters only.
- A "minimum" email contains at least sender's email address and one recipient address. Subject and body can be left empty.
- On save email body to a same <id> old body will be over written.
- When one email is being sent you cannot send another email. To put a queue of emails please use Command String "EM" (email sending) service.


Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

## CHAPTER 10: REMOTE AT COMMAND BY SMS

This feature is to control the modem to interpret AT command from incoming SMS, executing it, and return the result to sender by SMS.

The user can enable the modem to receive AT command by incoming SMS. See following about AT+SMSAT command.

### 1. Description of the operation

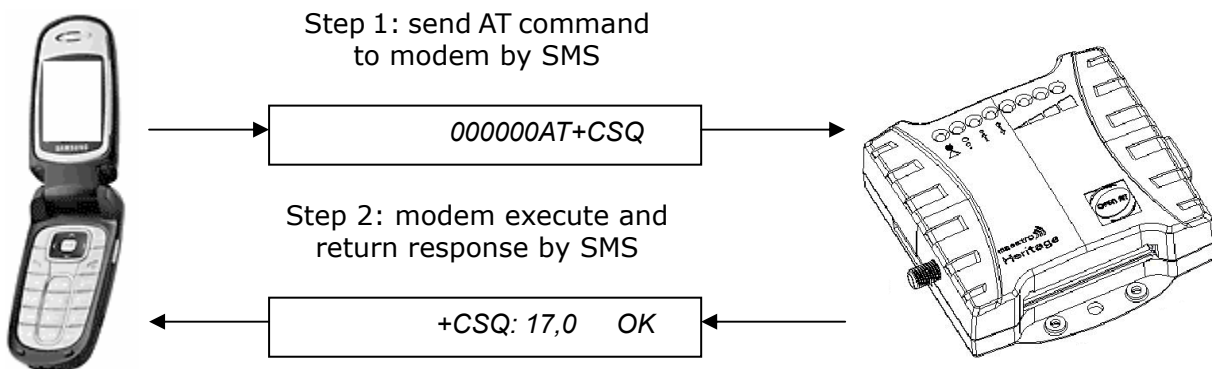

5. When enabled, **the modem will treat the incoming SMS as a source of AT command only if all of the following conditions (a, b and c) are fulfilled:**
  - a. The content of SMS sent to the modem is using standard 7-bit GSM data decoding scheme,
  - b. The first 6 characters of the SMS content matches the <key> parameter set by AT+SMSAT command, (default key is "000000")
  - c. The 7<sup>th</sup> and 8<sup>th</sup> characters of the SMS content is "AT" (in capital letters)
6. If SMSAT is enabled, the modem will read each incoming SMS, if the conditions mentioned in 1 are matched the message will be executed, even it is an invalid AT command
7. When using SMSAT feature, only +CNMI:x,1,x,x,x setting could be used (i.e. incoming message will be stored in SIM card).
8. The maximum length of the AT command is limited by length of SMS, i.e. 160-6 = 154 characters
9. When the SMS AT command is executed, all intermediate and final responses will be buffered recorded, then return to the sender's phone number in one single SMS.
10. If response(s) of the AT command is (are) more than 160 characters, only the first 160 characters will be returned.
11. In case the modem cannot get terminal response within 26 seconds, the modem will then abort the command, and return intermediate responses (if present).
12. If the SMSAT feature is enabled, all incoming SMS, either with valid AT command or not, will be erased. This is to prevent SIM card memory from fully filled; such the modem will not receive new SMS.

## 2. AT command for configuring AT command by SMS

### a. AT+SMSAT command

**Command Syntax:**

AT+SMSAT=<mode>(,<key>)

**Response syntax:**

+SMSAT: <mode>,<key>

Command	Possible responses:
AT+SMSAT=0	OK <i>Note : disable remote AT command by SMS</i>
AT+ SMSAT =1	OK <i>Enable remote AT command by SMS</i>
AT+ SMSAT?	+SMSAT : 1,000000 OK <i>Note display current status</i>
AT+SMSAT=2,123456	OK <i>Note: set the &lt;key&gt; value</i>
AT+ SMSAT =?	+SMSAT : (0-2),(6) OK <i>Note : possible argument</i>

**Defined Values:**

<mode>

- 0 disable remote AT command by SMS
- 1 enable remote AT command by SMS
- 2 change the value of the <key>

<key>

A 6-digit numeric character key from 000000 to 999999. Only incoming SMS with the first 6 characters matching with this key will be treated as a valid source of remote AT command.

## 3. Limitation and caution to be taken when using remote AT command

This feature will not 'judge' the result of executing the command, so care has to be taken not to enter improper command that make the modem becoming out of control:

1. Never send 'interactive' AT command by SMS, e.g. AT+CMGS=.... This feature cannot return the prompt to the sender for second input
2. Always wait for the return SMS with AT responses before you send another SMS AT command.
3. It could be in some case (e.g. network failure) the modem cannot return response SMS. The modem will try sending response SMS for three times max. If still not successful it will abort.
4. Always think twice before you send AT command by SMS. For example if you send AT+CPOF it will turn off the modem, and you need to go to access the modem to reset it.
5. Some AT commands can be sent over SMS. See Chapter 17.

## CHAPTER 11: CALL SCREENING

This feature enables Heritage to reject incoming call if the phone number does not match one of the entries of authorized phone number list. Unauthorized incoming call will be hanged up within one ring.

Up to 10 authorized phone numbers can be stored. Each number can be as long as characters  
Waiting call can also be rejected.

### 1. AT commands for configuring call screening

#### a. AT+CSRN command

This command is to enable or disable call screening feature.

**Command Syntax:**

AT+CSRN=<mode>

**Response syntax:**

+CSRN: <mode>

Command	Possible responses:
AT+CSRN=0	OK <i>Note : disable call screening</i>
AT+CSRN=1	OK <i>Enable call screening</i>
AT+CSRN?	+CSRN : 1 <i>Note display current status</i>
AT+CSRN=?	+CSRN: (0-1) <i>Note : possible argument</i>

**Defined Values:**

<mode>

- 0    disable call screening
- 1    enable call screening

**Note:**

- To use call screening make sure Caller ID service is enabled otherwise all incoming call will be rejected.
- To apply call screening to waiting call please first enable Call waiting indication by command AT=CCWA=1,1
- Rejected incoming will not be diverted to voice mail.

#### b. AT+CSNW command

This command is to enter authorized phone number.

**Command Syntax:**

AT+CSNW=<id>,<num>

**Response syntax:**

OK

Command	Possible responses:
AT+CSNW=1,"12345678"	OK <i>Note : enter authorized number to location 1</i>
AT+CSNW=11,"12345678"	+CME ERROR: 3 <i>Note : location out of range</i>
AT+CSNW=3,"1qaaa"	+CME ERROR: 3 <i>Note : non-numeric characters not allowed</i>
AT+CSNW=?	+CSRN: (1-10),(20) <i>Note : possible argument</i>

**Defined Values:**

<id>

Location of the authorized phone number to be stored. Valid range is from 1 to 10

<num>

Authorized phone number. First digit can be "+", others must be numeric digits. Maximum length is 20

**Note:**

- Enter phone number exactly same as the incoming one, especially if entering International phone number. Use AT+CLIP command to check incoming call number first.
- Enter empty phone number in the <num> field will erase the record of that location.

**c. AT+CSNR command**

This command is to read authorized phone number entered.

**Command Syntax:**

AT+CSNR=<id1>(,<id2>)

**Response syntax:**

+CSNR: <id>,<num>....

Command	Possible responses:
AT+CSNR=1	+CSNR: 1, "12345678" OK <i>Note : display authorized number in location 1</i>
AT+CSNR=1,8	+CSNR: 1, "12345678" +CSNR: 3, "123456" +CSNR: 6, "12345678" +CSNR: 8, "12345678"  OK <i>Note : display authorized number in from location 1 to 8</i>
AT+CSNR=?	+CSNR=(1-10),(1-10) OK <i>Note: possible argument</i>

**Defined Values:**

<id1>

Beginning location of the authorized phone number to be read. Valid range is from 1 to 10.

<id2>

Ending location of the authorized phone number to be read. Valid range is from 1 to 10.



#### d. AT+CSND command

This command is to erase authorized phone number entered.

**Command Syntax:**

AT+CSND=<id1>(<id2>)

**Response syntax:**

+CSNR: <id>,<num>....

Command	Possible responses:
AT+CSND=1	OK <i>Note : erase authorized number in location 1</i>
AT+CSNR=1,8	OK <i>Note : erase authorized number in from location 1 to 8</i>
AT+CSND=?	+CSND=(1-10),(1-10) OK <i>Note: possible argument</i>

**Defined Values:**

<id1>

Beginning location of the authorized phone number to be erased. Valid range is from 1 to 10.

<id2>

Ending location of the authorized phone number to be erased. Valid range is from 1 to 10.AT+CSRN command.

## CHAPTER 12: MODEM STATUS CHECK AND MONITORING

The Modem Status Check and Monitoring feature makes the modem can check the status of the modem in either “one shot” or periodic (per minute) mode. Modem will also report check result by SMS if result is beyond preset limit, and reset automatically if losing network connection.

Following items will be checked:

- network registration (periodic mode only, triggering reset)
- rom test
- signal strength (can trigger reporting)
- IP address of modem (only when GPRS connection activated).

### 1. AT command for Modem Status Check and Monitoring

#### a. AT+TMODE command

This command is to perform and setup modem status check and monitoring feature

**Command Syntax:**

AT+TMODE (= <mode> (<para>))

**Response syntax:**

+TMODE: <test1>, <test2>....

Command	Possible responses:
AT+TMODE	+TMODE: 1, 15, "10.111.222.33", 3814 OK <i>Note : execute status check ("one shot" mode)</i>
AT+TMODE=?	+TMODE: (0-4), (15) <i>Note : possible argument</i>
AT+TMODE?	+TMODE: 1, 1234567, 10, 3500 OK <i>Note: display current setting</i>
AT+TMODE=0	OK <i>Note: disable periodic mode check</i>
AT+TMODE=1	OK <i>Note: enable periodic mode check</i>
AT+TMODE=2,"1234567"	OK <i>Note: set telephone number for periodic mode reporting</i>
AT+TMODE=3,10	OK <i>Note: set network signal trigger level for remote reporting</i>
AT+TMODE=4,3450	OK <i>Note: set input voltage trigger level for remote reporting</i>

**Defined Values :**

**<mode>**

- 0 disable periodic mode check
- 1 enable periodic mode check
- 2 to set the number in <para> field as telephone number for periodic mode check reporting. See section 7.1.2 for details
- 3 to set the number in <para> field as network signal trigger level for periodic mode check reporting. See section 1b for details

## b. Operation of Modem Status Check and Monitoring

### “One Shot” mode:

When user enters AT+TMODE command the modem will perform a single check and will send back the result like this:

```
+TMODE: 1, 15, "10.111.222.33", 3814
OK
```

### Meaning of parameters:

Check item	Result field #	Result	Remark
rom data checksum	1	0 fail 1 pass	
network signal strength	2	Range from 1-32 (or 99)	same as AT+CSQ
modem IP address	3	In xxx.xxx.xxx.xxx format	Only shown when GPRS session is activated
Input voltage	4	Voltage to the modem's internal module (times 1000)	See * below

\* Note. This is not for end customer use.

### “Periodic” mode:


When user enters AT+TMODE=1 command the modem will perform periodic check every one minute:

- Firstly it will check if the modem is registered to the network; if the modem is not registered to the network it will increase a counter by one. If the counter reach 5 (i.e. not registered for consecutive 5 minutes) the modem will reset
- If the modem is registered to the network the counter will be reset to 0 and perform check same as “one shot” mode
- If the result of the network signal strength is lower than the setting of AT+TMODE=3,x the test result will be sent over SMS to the telephone number set by AT+TMODE=2,xxxxxxx (max number of digit is 20)
- If the result of the input voltage is lower than the setting of AT+TMODE=4,x the test result will be sent over SMS to the telephone number set by AT+TMODE=2,xxxxxxx
- If 3 consecutive checks fail (i.e. 3 SMS sent) then the periodic mode check will be disabled automatically.

Network signal trigger level range is from 1-31.

## CHAPTER 13: REMOTE PROGRAM UPDATE

By using this feature, user can download the new version of Maestro Heritage program from a FTP server and upgrade the program. By combining Remote AT command by SMS feature user can control the Maestro to complete the program downloading and updating process remotely.

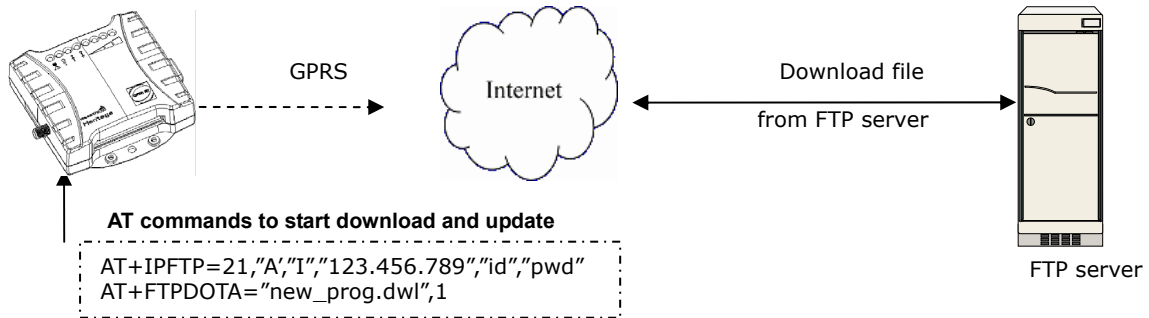

To perform the whole program update process, several AT commands (steps) have to be sent:

1. AT+IPGPRS to set network parameters (APN)
2. AT+IPFTP to set FTP server parameters (name, user id, password)
3. AT+FTPDOTA to set filename and FTP path and start downloading (\*)
4. AT+ADINSTALL to install the downloaded new program (\*)

(\*) Note: by adding one extra parameter after step 3 complete, step 4 will be executed automatically. See following sections for details

### 1. AT command for remote firmware update

#### a. AT+IPFTP command

This command is to set FTP server parameters

##### Command Syntax:

AT+IPFTP=<port>,<type>,<mode>,<server>,<id>,<pwd>

##### Response syntax:

OK

Command	Possible responses:
AT+IPFTP= 21,"I","A","201.123.222.222", "userid","pssd"	OK Note : setup FTP parameter
AT+IPFTP=?	+IPFTP: (0-65535), ("A","I","E"),("P","A"),(120),(64),(64) Note : possible argument
AT+IPFTP?	+IPFTP: 21,"I","A","201.222.222.222","userid","pssd" OK Note: display current setting

##### Defined Values :

###### <port>

Port number of the FTP server. Default value is 21

###### <type>

Translation of carriage return, valid values are:

- I image (no translation, default),
- A ASCII
- E EBCDIC

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

**<mode>**

Passive or Active mode valid values are:

- P passive (default),
- A active

**<server>**

IP address of FTP server (in xxx.xxx.xxx.xxx format) or an alpha numeric string format (e.g. ftp.server.com)

Maximum 120 characters

Note: if alpha numeric string format is used, make sure the GPRS network has proper DNS service available.

**<id>**

login name of the user. Maximum 64 characters.

**<pwd>**

Password for the user. Maximum 64 characters.

### b. AT+FTPDOTA command

This command is to inform the modem the filename and FTP path. The modem will login to the FTP server; download the update file, and optionally execute the update process.

**Command Syntax:**

AT+FTPDOTA =<filename>[,<path>],[,<update>]

**Response syntax:**

+FTPDOTA : 0, <filename>, <filesize>

+FTPDOTA : <result>

+ADINSTALL : <adinstall result>

Command	Possible responses:
AT+FTPDOTA="update.dwl"	+FTPDOTA: 0, update.dwl, 17000 OK <i>Note : download "update.dwl" file from FTP root directory, file size is 17000 bytes</i>
AT+FTPDOTA="update1.dwl,"sub"	+FTPDOTA: 0, update.dwl, 17001 OK <i>Note : download "update1.dwl" file from FTP "sub" directory, file size is 17001 bytes</i>
AT+FTPDOTA="update1.dwl,"sub",1	+ADINSTALL: 2 M100_VAF_094d_OAT316_32 Nov 11 200718:01:42 <i>Note : download "update1.dwl" file from FTP "sub" directory, and perform program update successfully</i>
AT+FTPDOTA?	+FTPDOTA: update.dwl, 17001 OK <i>Note : check downloaded file ready for update</i>
AT+FTPDOTA?	+FTPDOTA: OK <i>Note : no downloaded file</i>
AT+FTPDOTA="update1.dwl"	+FTPDOTA: -3 OK <i>Note : error on downloading file (FTP open fail)</i>
AT+FTPDOTA=?	+FTPDOTA: (128)[,(128)] <i>Note : possible argument</i>

**Defined Values:**

**<filename>**

File name of the file to be downloaded. Maximum 128 characters.

**<path>**

Path (directory) name where the file is placed. Maximum 128 characters. If <path> is omitted, program will try to download from FTP's root (entry) directory. Maximum 128 characters.

**<update>**

If a third parameter '1' is entered, the program will execute the AT+ADINSTALL command if the download process is successful. This is useful for sending update commands over SMS, so that one SMS is saved in this case. See next section for the details of AT+ADINSTALL command.

**<result>**

Result code of the downloading process:

Result code	explanation	Comments / countermeasure
0	Download successful	
-1	SIM card problem	Check SIM card and PIN
-2	Internal memory problem	Try reset modem
-3	FTP connection fail	Check network signal, check FTP status, check FTP address
-4	Reserved	
-5	Download file size not same as FTP reported	Retry downloading
-6	Not enough space for downloading	Contact Maestro Wireless
-7	File format incorrect	Check file for downloading
-8	Error writing flash	Contact Maestro Wireless
4xx – 5xx	FTP protocol return code	Check FTP document (RFC 959) for explanation

**c. AT+ADDINSTALL command**

This command is perform the program update process. File downloaded by AT+FTPOTA command will replace the existing Heritage program. Modem will restart and then restart result and version will be displayed.

**Command Syntax:**

AT+ADINSTALL

**Response syntax:**

+ADINSTALL: <result>, <ver>

Command	Possible responses:
AT+ADINSTALL	+ADINSTALL: 2 HERITAGE_090b_OAT422a_32 Feb 26 200811:42:36 <i>Note : update successful, show existing program version</i>
AT+ADINSTALL	+ADINSTALL: 3 HERITAGE_090a_OAT422a_32 Jan 26 200811:42:36 <i>Note : update unsuccessful, show existing program version</i>
AT+ADINSTALL	+CEE ERROR: 3 <i>Note : update unsuccessful, no update file available</i>



**Defined Values:**

<result>

2 update process successful

3 update process unsuccessful (original program will be loaded)

Note: for other result code please contact Maestro Wireless Solutions

<ver>

Version number of existing running Software Tools.


**d. Notes and cautions to be taken**

1. **This feature is ONLY for updating new program for Heritage. Do not use it for downloading other things.** Always contact Maestro Wireless or distributor for correct update file and information.
2. If you want to perform update for modem at remote site by AT command over SMS, make sure the feature is enabled by command AT+SMSAT=1 is entered.
3. Make sure you have setup GPRS settings by AT+IPGPRS command. When entering AT+FTPDOTA command the program will make GPRS connection automatically if not connected before.
4. It is recommended to stop other Software Tools such as AutoTCP/UDP connection during program downloading and updating.
5. Depending on the file size and network condition the download time could be a few minutes up to 30 minutes. Be patient to wait for response after entering AT+FTPDOTA command.
6. Do not use “~” character on file path because it cannot be transferred correctly over SMS.
7. No resume function on FTP downloading. The whole file has to be downloaded at one time otherwise the downloaded data will be discarded.

## CHAPTER 14: COMMAND STRING - INTRODUCTION


“Command String” is a set of programmable scripts for Maestro Heritage mode. User can input sets of Command Strings to control various kinds of “Service”. Unlike AT command, Command strings can be stored inside heritage and can be executed upon output of certain services.

### 1. Command String and “Service” Concept

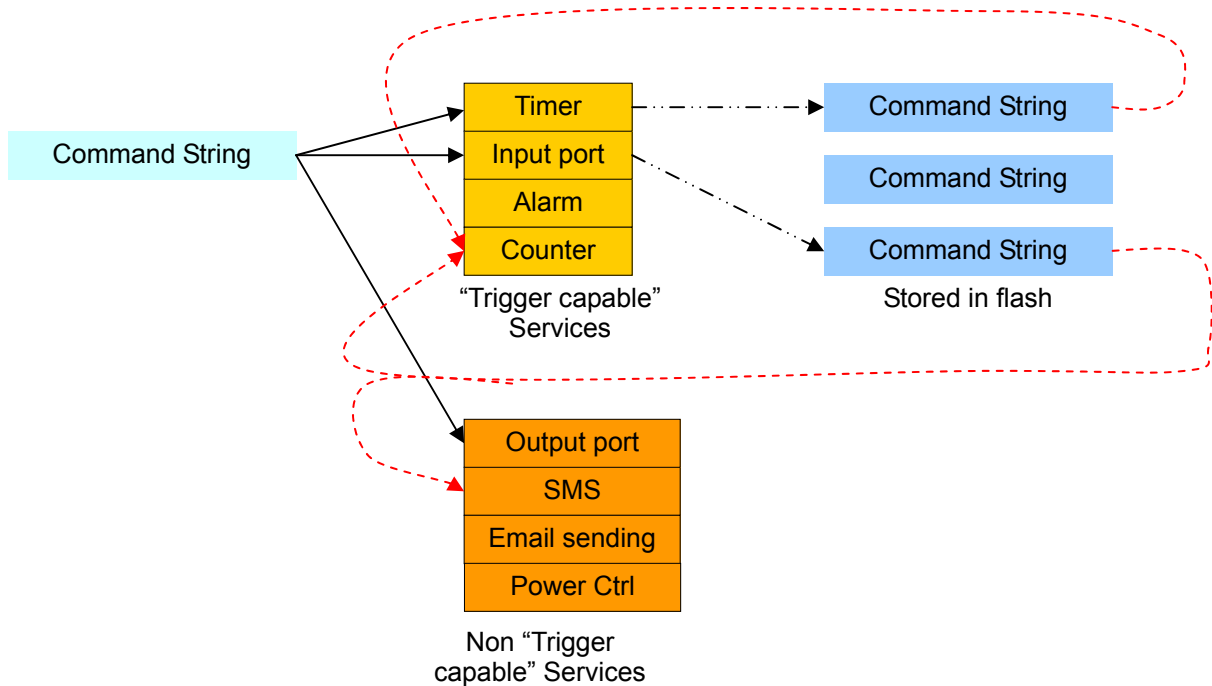

#### “Command String” and “Service” operation mechanism

1. Use AT command to enter preset Command Strings
2. Command strings can be executed upon power up or directly by AT commands
3. Executed Command Strings will drive some Services to be done (e.g. sending SMS or setting output pins)
4. Executed Command Strings can also configure and control some Services that have “trigger” capability.
5. These Services, when a certain pre-defined condition is matched (e.g. timer reach zero) can “trigger” a stored Command String.
6. Execute stored Command String to control Services again

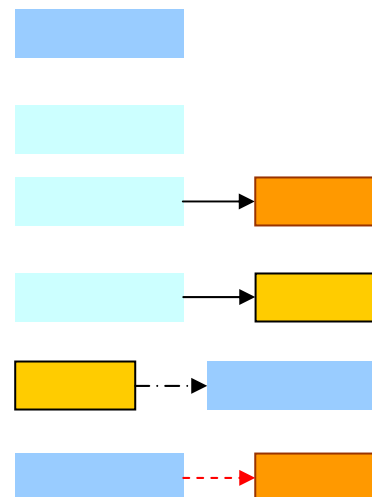




## CHAPTER 15: COMMAND STRING – WRITING AND USING

### 1. Structure of Command String

A single Command String is a text string composed with four fields, for example:

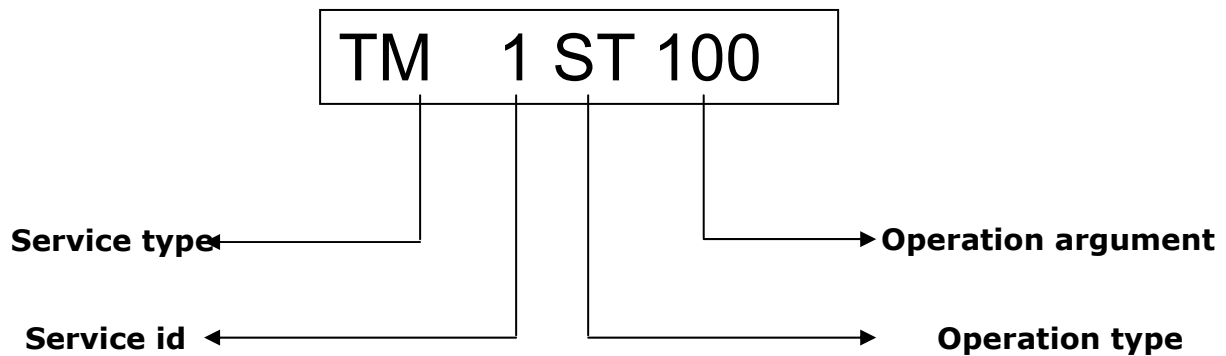

Each field is separated by a space (ascii value 32)

#### a. Service type

This field has two capital characters indicates the type of Service to be chosen:

Field entry	AL	CT	TM	IP (*)	OP (*)	SM
Service	alarm	Counter	Countdown timer	input ports	output ports	SMS
See Chapter	13.1	13.2	13.3	13.4	13.5	13.6

(\*) Services need optional I/O plug-in board

See further chapters for the explanation of each service.

#### b. Service Id

Each type of Service there has more than one unit; e.g. there are 5 counters available so the id range is 1 to 5

#### c. Operation type and Operation argument

For each type of Service there are few kinds of operations; e.g. “TM 1 ST 100” means to set the value or countdown timer #1 to 100 seconds. See further chapters for the explanation of each service.

### 2. Concatenating Command String

You can concatenate Command Strings up to 128 bytes long totally (including space). They will be executed sequentially. However, if one Command String is incorrect or invalid execution will be stopped and successive Command Strings will not be executed.

For example:

TM 1 ST 100 TM 1 TR 99 TM 1 SW 1

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

- First String “TM 1 ST 100” will be executed
- Second String “TM 1 TR 99” will not be executed because “99” is out of range
- Third String “TM 1 SW 1” is correct but will not be executed because execution is stopped on 2<sup>nd</sup> String

### 3. Entering and executing Command String

You can use the following AT commands to store and execute Command String

#### a. AT+CSTR command

**Description:**

This command is used to execute a Command String directly.

**Command Syntax:**

AT+CSTR= <string>

**Response Syntax:**

OK

+CME ERROR : 3

Command	Possible responses:
AT+ CSTR="TM 1 ST 3"	OK <i>Note: entire Command String executed successfully</i>
AT+ CSTR="TM 1 ST 3 TM 30 ST 4"	+CME ERROR: 3 <i>Note: one Command String cannot be executed</i>

**Defined Values:**

<string>

Command String

Note: When there is error in between concatenated Command String +CME ERROR: 3 will be returned. See 2.2.

#### b. AT+CSTRSET command

**Description:**

This command is used to store, read and delete Command String. It can also used to execute stored Command String.

**Command Syntax:**

AT+CSTRSET= <oper>,<id>[,<string>]

**Response Syntax:**

OK

+CME ERROR: 3

Command	Possible responses:
AT+ CSTRSET=0,1,"TM 1 ST 3"	OK <i>Note: store Command String with String id = 1</i>
AT+ CSTRSET=0,99,"TM 1 ST 3"	+CME ERROR: 3 <i>Note: id out of range</i>
AT+CSTRSET=1,1	+CSTRSET : 1, "TM1 ST 3" <i>Note: read stored Command String id 1</i>

AT+CSTRSET=3,1	OK <i>Note: execute stored Command String id 1</i>
AT+CSTRSET=2,1	OK <i>Note: erase Command String id 1 from flash memory</i>
AT+CSTRSET=3,1	+CME ERROR: 3 <i>Note: id 1 is empty</i>

**Defined Values:**

**<oper>**

Define type of operation:

- 0 store Command String to flash
- 1 read Command String from flash
- 2 erase Command String from flash
- 3 execute Command String stored in flash

**<id>**

Identification number (id) of the Command String. Valid value is 1 to 50, and 80; i.e.

- up to 51 Command Strings can be stored.
- Command String with id = 80 will be executed when modem power up

**<string>**

Command String

**Note:**

- Each Command String is limited to 128 bytes.
- The program will NOT check if the input Command String is valid or not.

## CHAPTER 16: COMMAND STRING – SERVICES

“Service” is a kind function or tool that can be made use by Command String. There are two kinds of Services:

- **Trigger capable**

When a certain pre-defined condition is matched (e.g. timer reach zero) “trigger” a stored Command String.

These Services include: Alarm, Counter, Input Port, and Countdown Timer

- **Non-Trigger capable**

Can only perform job when called by Command String.

These Services include: Output Port, SMS

### 1. Alarm Service

Alarm is used to execute a Command String when the real-time clock of the Heritage meets the set time of the Alarm.

To use Alarm it is required to set the real-time clock of the modem properly, see AT+CCLK in AT command manual. There are total of 5 Alarms can be used

#### a. Alarm Service Command String Syntax and explanation

1 <sup>st</sup> field Service type	2 <sup>nd</sup> field Service id	3 <sup>rd</sup> field Operation type	4 <sup>th</sup> field Operation argument	Explanation
AL	(1 to 5)	ST	09/10/10,12:00:00	Set alarm date/time yy/mm/dd,hh:mm:ss format
		ST	0	Cancel preset
		TR	(1 to 50) 0	Set Command String to be run, 0 to cancel setting

Example: Set alarm #1 to execute Command String #20 at 01OCT2008, 01:00:00

**AL 1 TR 1 AL 1 ST 08/10/01,01:00:00**

Example: Cancel #1 Alarm setting

**AL 1 ST 0**

Example: Cancel #1 Alarm executing Command String

**AL 1 TR 0**

**Note:**

- The Alarm date time input MUST to fulfill the following requirements:
  1. In yy/mm/dd,hh:mm:ss format, program will also check if input date/time is valid or not
  2. At least 4 minutes later than current modem’s real-time clock time (check by AT+CCLK command)
- Do not concatenate after ST operation; set time operation should be at the last part of Command String
- After alarm time, the ST setting of that Alarm will be lost
- This service will make use of Heritage internal alarm command (AT+CALA) so please avoid using AT+CALA command by yourself when Alarm Service is used.
- If the modem is restarted, date time setting of each Alarm will be checked against real-time clock time. If time is passed the setting will be cancelled.
- Alarm Service is “one-shot” type. There is no periodic alarm like “daily” or “weekly”

#### b. Reading Alarm Service status

See Chapter 17 for details.

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

## 2. Counter Service

Counter is used to execute a Command String when the Counter value equals a preset value. There are total of 5 Counters.

### a. Counter Service Command String Syntax and explanation

1 <sup>st</sup> field Service type	2 <sup>nd</sup> field Service id	3 <sup>rd</sup> field Operation type	4 <sup>th</sup> field Operation argument	Explanation
CT	(1 to 5)	DE	1 TO 255	Decrement the value of Counter with argument value
		IN	1 TO 255	Increment the value of Counter with argument value
		RS	0	Reset the Counter value to zero
		ST	-32768 to 32767	Set the "trigger" value If Counter value equal this value, will execute Command String
		TR	(1 to 50) 0	Set Command String to be run, 0 to cancel setting

Example: Set Counter #1 to execute Command String #10 if Counter value equal 100

**CT 1 ST 100 CT 1 TR 10**

Example: Increase Counter #1 value by 20

**CT 1 IN 20**

Example: Reset Counter #1 value to 0

**CT 1 RS 0**

#### Note:

- Initial Counter and trigger values are zero.
- The Counter is recorded by a signed 16 bit register, if the Counter value is 32767 and you increase it by 1, the value will change to -32768
- There is no limit on no. of times of triggering. E.g. If you first set trigger value to 2 and reset Counter to 0, then you increment counter by 2, then decrement by 2 and increment by 2 again. Then the associated Command String will be executed twice

### b. Reading Counter Service status

See Chapter 17 for details.

## 3. Countdown Timer Service

Countdown Timer is used execute a Command String when the Timer value reach zero. Counting period is 1 second. There are total of 10 Countdown Timers.

### a. Countdown Timer Service Command String Syntax and explanation

1 <sup>st</sup> field Service type	2 <sup>nd</sup> field Service id	3 <sup>rd</sup> field Operation type	4 <sup>th</sup> field Operation argument	Explanation
TM	(1 to 10)	ST	1 TO 2147483647	Initial value of Countdown Timer (in seconds)
		SW	0 TO 1	Start (1) or Stop (0) Timer
		TR	(1 to 50) 0	Set Command String to be run, 0 to cancel setting

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

Example: Set Countdown Timer #1 to execute Command String #10 and start 600 seconds countdown

**TM 1 ST 600 TM 1 SW 1 TM 1 TR 10**

Example: Stop Countdown Timer #1

**TM 1 SW 0**

Example: Cancel Countdown Timer #1 to trigger Command String

**TM 1 TR 0**

**Note:**

- When the Countdown Timer expires (reach 0) it will stop automatically (SW 0).
- If two or more Timers expire at the same timer, Timer with smaller id has higher priority, i.e. Command String related to that Timer will be executed first.
- These are not precision Timers, if the Modem is busy (e.g. with network communication). The execution time may be delayed

### **b. Reading Countdown Timer status**

See Chapter 17 for details.

## **4. Input Port Service**

**NOTE: An optional I/O plug-in board is needed to plug to Heritage for using this Service. Contact Maestro Wireless for information.**

Input Port Service can use the signal of I/O board’s input ports to control the execution of Command String.

You can control the change of single or multiple Input Port signals as a condition to trigger Command String execution.

### **a. Input port Service Command String Syntax and explanation**

<b>1<sup>st</sup> field Service type</b>	<b>2<sup>nd</sup> field Service id</b>	<b>3<sup>rd</sup> field Operation type</b>	<b>4<sup>th</sup> field Operation argument</b>	<b>Explanation</b>
IP	1 to 6, 101 to 106	DR	0 to 1 if IP# is 1 to 6	Direction of I/P signal change to trigger
			1 TO 63 if IP# is 101 to 106	Binary sum value of multiple I/P to trigger
		MS	1 TO 63	“Mask” value to select multiple I/Ps for triggering
		TH	1 to 255	Duration of the I/P state to trigger, unit in 0.1s
		TR	(1 to 50) 0	Set Command String to be run, 0 to cancel setting

Example: Configure Input Port #1 with detection “high to low” and threshold value 0.1s, and trigger Command String #5 if signal condition match:

**IP 1 DR 1 IP 1 TH 1 IP 1 TR 5**


Example: Configure Input Port #4 is high and Port#6 is low and threshold value 0.1s, and trigger Command String #5 if signal condition match:

**IP 101 MS40 DR8 IP 101 TH 1 IP 1 TR 5**

Example: cancel Input Port#1 to trigger Command String

**IP 1 TR 0**

**b. Input Port operation mechanism (single I/P triggering)**

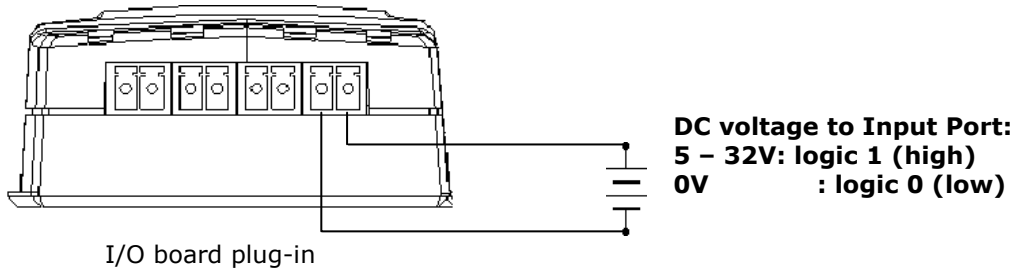

The Input Port will give out a high or low signal depending on the input voltage to the port  
The Command String can check the change of Input port Signal (operation “DR”):


IP 1 DR 0 → detect a low-to-high input voltage change

IP 1 DR 1 → detect a high-to-low input voltage change


To prevent transient noise signal, a threshold value can be set (operation “TH”). This is the time period required for the detected state to trigger Command String execution. Unit is in 1 millisecond. Valid value from 1 to 50 (0.1 sec to 5 sec)

E.g. TH 10 → Threshold value is 1 sec.

E.g. When set as low-to-high triggering and threshold 1 second: **IP 1 DR 0 IP 1 TH 10 IP 1 TR 5**

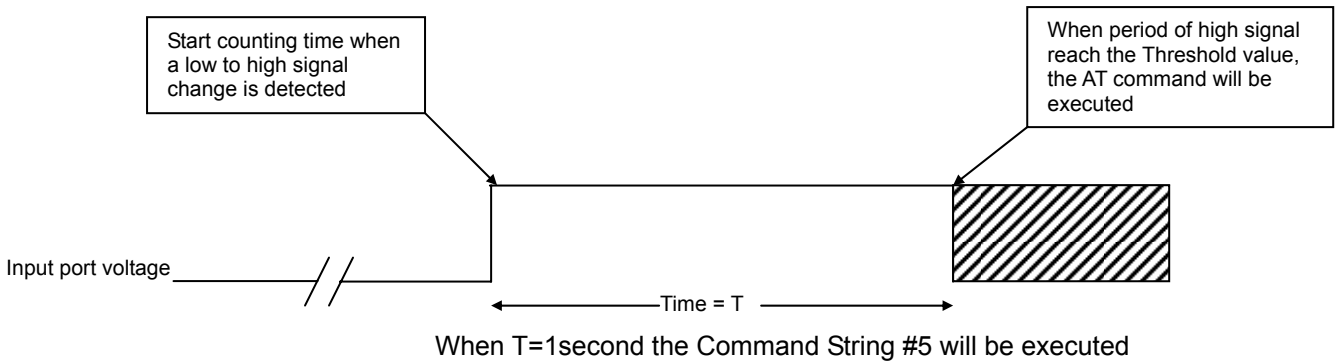

E.g. when set as high-to-low triggering and threshold 1 sec **IP 1 DR 1 IP 1 TH 10 IP 1 TR 5**

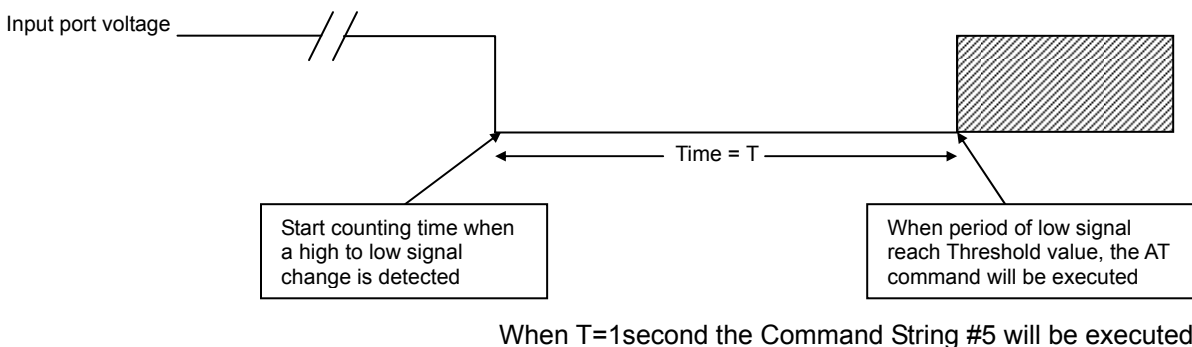

### c. Input Port operation mechanism (multiple I/P triggering)

For multiple I/P triggering each I/P port will be assigned with a numerical value:

I/P#	1	2	3	4	5	6
value (decimal)	1	2	4	8	16	32
value (binary)	1	10	100	1000	10000	100000

To select I/P Ports use the "MS" operation with value equal to the sum of values according to the above table, for example:

IP 101 MS 40 → I/P Port #4 and 6 signal is selected for Id 101 (8+32)

IP 102 MS 3 → I/P Port #1 and #2 signals is selected for Id 102 (1+2)

And operation "DR" is now used to determine the state(s) (not direction) of I/P Ports to trigger. If the I/P is "low" (0) state the value is 0, otherwise the valuing method is same as "MS" operation, for example:

IP 101 DR 32 → both I/P Port #4 and #6 with high '1' signal will trigger (0+32)

IP 102 DR 2 → both I/P Port #1 Is low (0) and #2 is high '1' signal will trigger. (0+2)

"TH" operation is same as single I/P triggering

**Note:**

- Due to product limitation the modem cannot detect switching action with period less than 100ms. If the input signal change is less than 100ms this feature will not be able to detect accurately.
- Always uses Id#101 to 106 for multiple I/P triggering application.
- If two or more I/P Ports change at the same timer, I/P Port smaller id have higher priority, i.e. Command String related to that I/P Port will be executed first.
- It is possible that a single I/P Port can be included into two or more multiple I/P Port groups.
- In case of multiple I/P triggering it will NOT check the direction of signal change of each included I/P; just check the combined state value against DR value. ion). The execution time may be delayed

### d. Reading I/P Port status

See Chapter 17 for details.



## 5. Output Port Service

**NOTE: An optional I/O plug-in board is needed to plug to Heritage for using this Service. Contact Maestro Wireless for info.**

Output Port Service can control the state of I/O board's output ports by Command String.


### a. Output Port Service Command String Syntax and explanation

1 <sup>st</sup> field Service type	2 <sup>nd</sup> field Service id	3 <sup>rd</sup> field Operation type	4 <sup>th</sup> field Operation argument	Explanation
OP	(1 to 6)	SW	0 TO 1	Set the state of Output Port

Example: Set the Output Port #1 with logic state "ON" (1)

**OP 1 SW 1**

Input Port operation mechanism:

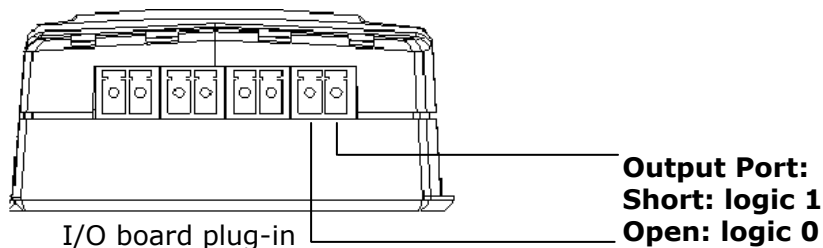

OP 1 SW 1 → Output Port #1 will short

OP 1 SW 0 → Output Port #1 will open

**Note:**

Read I/O board plug-in documentation for the connecting and specifications of Output Ports. When power up or reset, ALL Output Ports are set to logic 0 (open). Previous output state will NOT be kept.

### b. Reading O/P Port status

See Chapter 17 for details.

## 6. SMS Service

This service is used to send out a SMS to phone number recorded in the first 10 phonebook records in SIM card.

### a. SMS Service Command String Syntax and explanation

1 <sup>st</sup> field Service type	2 <sup>nd</sup> field Service id	3 <sup>rd</sup> field Operation type	4 <sup>th</sup> field Operation argument	Explanation
SM	(1 to 10)	SN	(SMS content)	Send out the SMS to phone number inside SIM card
			%CTn %IP %TMn	"%" to indicate "variable" options in SMS content

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.



Example: Send a message “ALERT” to phone number store in SIM phonebook #1:

**SM 1 SN ALERT**

Example: Send a message “Counter#2\_value\_is\_20” to phone number store in SIM phonebook #1:

**SM 1 SN Counter#2\_value\_is\_%CT2**

### **b. Using “variable” options within SMS content**

In the SMS content field you can use “%” and Service type to insert the current value of Service into the SMS content:

Variable	%CTn	%TMn	%IP	%OP
Description	Current value of counter Id#n	Current value of Timer Id#n	Current I/P Ports’ summing value	Current O/P Ports’ summing value (calculation same as I/P Ports)
Range of ‘n’	1 to 5	1 to 10	(See Chap 13.4.c for calculation)	(See Chap 13.4.c for calculation)

Invalid Service name or Id will be ignored.

**Note:**

1. Due to modem/SIM initialization it is recommended to send SMS 30 seconds after power up.
2. Only send SMS with “normal” characters. If SMS content has character with ASCII value outside the range between 11 and 127, the SMS may not be sent properly.
3. In case of sending SMS failure (e.g. network problem) the program will delay 0.5 second and try to resend the SMS. If the second time retry (i.e. 3 times total) fails this SMS delivery will be aborted.
4. The maximum length of the SMS content is limited by the maximum length of Command String (128 bytes). The more of Command Strings, the less of SMS length.

## 7. Email Sending Service

This service is used to send out an Email to one or more email saved address, with saved email subject and saved plus variable email content. Please read Chapter 9 for entering email address, subject and body. Up to 10 set of groups (service type EM, id 1 to 10) can be set with different combinations of "elements" : recipient(to,cc,bcc), subject and body.

### a. Email Sending Service Command String Syntax and explanation

1 <sup>st</sup> field Service type	2 <sup>nd</sup> field Service id	3 <sup>rd</sup> field Operation type	4 <sup>th</sup> field Operation argument	Explanation
EM	(1 to 10)	TO	(0-50)	Id of recipient email address (see Chapter 9.2b) 0 : no recipient
		CC	(0-50)	Id of "cc" recipient email address (see Chapter 9.2b) 0 : no cc recipient
		BC	(0-50)	Id of "bcc" recipient email address (see Chapter 9.2b) 0 : no bcc recipient
		SU	(0-10)	Id of email subject (see Chapter 9.2c) 0 : no subject
		BD	(0-3)	Id of email body (see Chapter 9.2c) 0 : no body
		SN	(additional content)	Send out the email with above setting plus additional content
			%CTn %IP %OP %TMn	"%" to indicate "variable" options in SMS additional content

Example: Setting up EM set #1 with elements: recipient #1, cc #3, bcc #4, subject #1, content #2:

**EM 1 TO 1 EM 1 CC 3 EM 1 BC 4 EM 1 SU 1 EM 1 BD 1**

Example: Sending email EM set#1 with additional content "HELLO\_WORLD":

**EM 1 SN HELLO\_WORLD**

Example: Setting up EM set #2 with elements: recipient bcc #3, no subject and content only "0", and send out immediately:

**EM 2 BC 3 EM 2 SN 0**

Example: Send a message "Counter#2\_value\_is\_20" to phone number store in SIM phonebook #1:

**SM 1 SN Counter#2\_value\_is\_%CT2**

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

## b. Using “variable” options within additional email content

In the Email additional content field you can use “%” and Service type to insert the current value of Service into the additional content:

Variable	%CTn	%TMn	%IP	%OP
Description	Current value of counter Id#n	Current value of Timer Id#n	Current I/P Ports' summing value	Current O/P Ports' summing value (calculation same as I/P Ports)
Range of 'n'	1 to 5	1 to 10	(See Chap 13.4.c for calculation)	(See Chap 13.4.c for calculation)

Invalid Service name or Id will be ignored.

### Note:

- To use Email Sending Service make sure all parameters has been setup properly first:
  - APN (+IPGPRS)
  - SMTP server (+IPSMTP)
  - Sender and recipient address (+EMADDR)
  - Subject (+EMSUBJ)
  - Body (+EMBODY)

It is strongly suggested you have tested the email sending function by using AT+EMSEND command to send test emails first before using EM Command Sting.
- If Operation argument of TO,CC,BC,SU and BD is set to 0(default), the associated Email set will not contain that element
- A minimum email contains one recipient (either TO, CC or BC) and one character of additional email content.
- Unlike AT+EMSEND command, sending email use EM service will automatically making GPRS connection (+IPCONNECT=1,1)
- In case email sending is unsuccessful due to any reason, the same email will be resent for max 2 more times. If all retries are fail that Email will be aborted
- When using EM service maximum 10 emails can be put on sending queue, further Email sending requests will be aborted. Buffered email queue is volatile and will be lost If modem Is power off or reset. Also when there is EM service in queue AT+EMSEND command will not be allowed.
- The maximum length of the SMS content is limited by the maximum length of Command String (128 bytes). The more of Command Strings, the less of SMS length.

## c. Reading Email Sending Service status

See Chapter 17 for details.

## 8. Device Power Control Service

By using Device Power Control Service user can control on/off state of certain component of the Heritage, in order to save power consumption. A single Service id field can be set to control four parts of the Heritage.

### a. Device Power Control Service Command String Syntax and explanation

1 <sup>st</sup> field Service type	2 <sup>nd</sup> field Service id	3 <sup>rd</sup> field Operation type	4 <sup>th</sup> field Operation argument	Explanation
PW	(0 to 15)	(don't care)	(don't care)	Service Id to decide componets' on/off state

Example: Enable low clock mode and disable LEDs :

**PW 3 0 0**

Example: Enable low clock mode; disable LEDs,UART and deregister from Network

**PW 15 0 0**

The value of Service Id is the sum of the values each of which is related to a particular Device Power Control operation:

value	Function	Remark
1	Turn off LEDs	except network status LED
2	Enable power down mode (W32K mode)	Same as <b>AT+W32K=1</b> command
4	Deregister from network ("Flight mode")	Same as <b>AT+COPS=2</b> command
8	Turn off UART	Com port will not get any data

The larger the id value of PW, the more power saving of the Heritage. For example user can set e.g. the Heritage to register to network only once per day, sending out SMS, then de-register.

#### Note:

- **BE VERY CAREFUL to use with id #8 (Turn off UART). This will make Heritage Com port switched off and cannot accept AT command. NEVER program the Heritage to enable this once power up.**
- Although "Operation type" and "Operation argument" fields are ignored, "dummy" entries are needed for consistent Command String Syntax. Use may write "PW" Command String like this ("0" as dummy entry) :

**PW 15 0 0**

- Refer to AT command manual for the details of power down (W32K) mode.
- It is recommended to use "PW" service some time after power on. So user can have time to change setting.
- Each time when "PW" Command String is executed. Refer to AT command manual for the details of power down (W32K) mode.
- Refer to AT command manual for the details of power down (W32K) mode.



- This Device Power Control setting is not saved by itself, so each time when power on the status should be 0 (without any "PW" Command String executed)

### **b. Reading Device Power Control status**

See Chapter 17 for details.

## CHAPTER 17: COMMAND STRING –READING STATUS OF SERVICES

### 1. Command for reading current information of Services

You can use AT command to read the info of trigger capable Services.

#### a. AT+CSTRSTAT command

**Description:**

This command is to read current parameter or status of a particular service.

**Command Syntax:**

AT+CSTRSTAT="*<type>* *<id>*"

**Response Syntax:**

OK

+CME ERROR: 3

Command	Possible responses:
AT+ CSTSTAT="AL 1"	AL 1 : ST 01/01/01,12:00:00 TR 2 OK <i>Note: read current setting of Alarm #1</i>
AT+ CSTRSTAT="TM 10"	TM 10: CV 66 SW 1 TR 20 OK <i>Note: read current info of countdown timer #10</i>
AT+CSTRSTAT="IP 9"	+CME ERROR: 3 <i>Note: id out of range</i>

**Defined Values:**

*<type>*

Define type of Service:

AL alarm

CT counter

IP Input Port

CT Countdown timer

PW Device Power Control

*<id>*

Service id

#### b. Reading Alarm Service

Enter AT+CSTRSTAT = "AL 1" will get Alarm #1 info:

AL	1	:	ST	01/01/01,12:00:00	TR	3	
-----	-----	-----	-----	-----	-----	-----	
a			b			c	

a. Service id  
b. datetime set (space if not set)  
c. Command String id to be executed if trigger (0 if not to trigger)

### c. Reading Counter Service

Enter AT+CSTRSTAT = "CT 1" will get Counter #1 info:

<u>CT 1</u>	:	<u>ST 300</u>		<u>CV 20</u>		<u>TR 3</u>		a. Service id
-----		-----		-----		-----		b. trigger value of the counter
a		b		c		d		c. current value of the counter
								d. Command String id to be executed if trigger (0 if not to trigger)

### d. Reading Countdown Timer Service

Enter AT+CSTRSTAT = "TM 1" will get Countdown Timer #1 info:

<u>TM 1</u>	:	<u>CW 90</u>		<u>SW 0</u>		<u>TR 3</u>		a. Service id
-----		-----		-----		-----		b. current value of the timer
a		b		c		d		c. timer is running (1) or stop (0)
								d. Command String id to be executed if trigger (0 if not to trigger)

### e. Reading Input Pin Service

Reading Enter AT+CSTRSTAT = "IP 1" will get Input Port #1 info:

<u>IP 1</u>	:	<u>MS 1</u>		<u>DR 0</u>		<u>TH 5</u>		<u>TR 3</u>	a. Service id
-----		-----		-----		-----		-----	b. Mask value (valid for multiple I/P trigger)
a		b		c		d		e	c. direction of detection
									d. threshold value of the detection
									e. Command String id to be executed if trigger (0 if not to trigger)

### f. Reading Output Pin Service

Enter AT+CSTRSTAT = "OP 1" will get Device Power Control info:

<u>OP 1</u>	:	<u>SW 0</u>						a. Service id
-----		-----						b. State (0 : low, 1 : high)
a		b						

### g. Reading Device Power Control Service

Enter AT+CSTRSTAT = "PW 1" will get Device Power Control info:

<u>PW 0</u>								a. Current Service id (mode)
-----								
a								

### h. Reading Email Sending Service

Reading Enter AT+CSTRSTAT = "EM 1" will get Email set #1 info:

<u>EM 1</u>	:	<u>TO 1</u>		<u>CC 0</u>		<u>BC 5</u>		<u>SU 3</u>		<u>BD 1</u>		a. Service id
-----		-----		-----		-----		-----		-----		b. id of TO recipient
a		b		c		d		e		f		c. id of CC recipient
												d. id of BC recipient
												e. id of email subject
												f. id of email body



## CHAPTER 18: KNOWN ISSUES

The Heritage Softtools will affect certain other AT commands operation. Please note.

### **1. AT +WIND command**

AT+WIND command will be disabled

### **2. Saving of parameters to non-volatile memory**

You cannot save the settings of the following AT commands by concatenating the &W command:

AT+CREG

AT+CGREG

AT+CGEREP

To save the above settings please enter AT&W separately.

### **3. Mutually exclusive TCP/UDP functions**

Following functions are exclusive to each other, i.e. if either is enabled others could not be then:

AT+AUTOTCP=1

AT+AUTOUDP=1

AT+OTCP

### **4. Sending Heritage Software commands over SMS**

You can use the remote AT command by SMS feature to send Heritage Software AT commands mentioned in this document except the followings:

AT+OTCP

AT+OUDP

AT+IPCONNECT

AT+EMBODY

AT+ETHRST

## CHAPTER 19: QUESTIONS AND ANSWERS

### 1. *AutoTCP/UDP*

- Q. Can I specify <server> by URL (e.g. xxxx.com) rather than IP address?
- A. Yes, but only if your GPRS network have proper DNS service. You cannot specify your own DNS server
- Q. If I enabled AutoTCP or AutoUDP, how can I stop it?
- A. you need to enter the command **AT+AUTOTCP=0** or **AUTOUDP=0** by either 1: within 20 seconds after power up, or 2: during reconnection (serial port back to command mode), or 3: by SMS (see Chapter 6)

### 2. *AT command driven TCP/UDP connection*

- Q. Why I see three “OK” coming after entering **AT+IPCONNECT=1,1** command?
- A. The Software Tools program is issuing internal AT command for GPRS setup, so extra “OK” responses will be seen.
- Q. After the TCP/UDP connection is stopped I want to enter **AT+OTCP** or **AT+OUDP** to reconnect but I get message “+CME ERROR: 3”. Why?
- A. After TCP/UDP socket connection the GPRS connection session will also be disconnected. So please enter **AT+IPCONNECT=1,1** to reconnect GPRS first.

### 3. *Remote AT command by SMS*

- Q. Can I send any AT command by SMS to control other features described in this document?
- A. Yes. Please refer to Chapter 18.

### 4. *Command String Feature*

- Q. Are the status of Services settings and status will be saved when power is cut?
- A. All Services status will be saved into non-volatile memory, so e.g. like Countdown timer will resume counting when power recover.  
But all Output Ports will be set to logic 0 when power up.
- Q. Can I check the status out Output Ports?
- A. Yes. You can use **AT+CSTRSTAT** command to check
- Q. What should be noted with the execution priority of concatenated Command String?
- A. During executing concatenated Command String, if the 1<sup>st</sup> part of the CS leading to another no. of the CS to be triggered, then the triggered CS will be executed first, e.g.  
“CT 1 IN 1 CT 1 DE 1”  
If the first CS (counter #1 increment by 1) will let the Counter#1 to trigger CS #2, then CS #2 will be executed BEFORE executing “CT 1 DE 1”

## CHAPTER 20: EXAMPLES OF HERITAGE SOFTWARE SETUP AND OPERATION

### 1. To setup a Automatic TCP connection

To setup Auto connect to TCP server with IP 61.167.60.1 port 23 (client mode)

Commands to be entered	Modem response
AT+IPGPRS=1,"INTERNET" (APN is INTERNET)	OK
AT+IPCTP = 23,"C","61.167.60.1",1 (target TCP is 61.167.60.1, port 23, client mode, TxDelay is enabled)	OK
AT+AUTOTCP=1 (open TCP socket connection)	OK
(TCP connection will start after 20 secs)	

To setup Auto connect to remote TCP client request with any IP address, port 23(server mode)

Commands to be entered	Modem response
AT+IPGPRS=1,"INTERNET" (APN is INTERNET)	OK
AT+IPCTP = 23,"S","255.255.255.255",1 (to accept TCP connection from any IP address, port 23, client mode, TxDelay is enabled )	OK
AT+AUTOTCP=1 (open TCP socket connection)	OK
(Modem will start to monitor TCP port 23 after 20 secs)	

### 2. To make a AT command driven TCP connection

IP Connectivity (AT# feature) user can follow the following steps to make OTCP connection

To connect to TCP server with IP 61.167.60.1 port 23

Commands to be entered	Modem response
AT+IPGPRS=1,"INTERNET" (APN is INTERNET)	OK
AT+IPCTP = 23,"C","61.167.60.1",1 (target TCP is 61.167.60.1, port 23, TxDelay is enabled )	OK
AT+DLEMODE=1	OK
AT+CGATT=1	OK
AT+IPCONNECT=1,1 (GPRS connection)	OK OK OK
AT+OTCP (open TCP socket connection)	CONNECT 115200

### 3. To setup periodic ping

To setup to pin an IP address every 30 minutes, disconnect GPRS if fail

Commands to be entered	Modem response
AT+IPGPRS=1,"INTERNET" (APN is INTERNET)	OK
AT+IPPING = 2,"61.167.60.1", 3,2,15 (ping is 61.167.60.1,no. of trial is 3, delay between pin is 2 secs, timeout is 15 secs)	OK
AT+IPOPT=4,1800,1 (enable Ping every 1800secs, if ping fail then disconnect GPRS )	OK

### 4. To setup TCP Terminal and Dynamic DNS automatic update


Open TCP Terminal with port 1024, and enable DDNS update with hostname "mymodem.dyndns.org"

Commands to be entered	Modem response
AT+IPGPRS=1,"INTERNET" (APN is INTERNET)	OK
AT+IPDDNSSERV="members.dyndns.org",80 (set DDNS server settings)	OK
AT+IPDDNSACCT="mymodem.dyndns.org","mylogin","mypsswd" (set DDNS account settings)	OK
AT+IPDDNSUPD=1 (enable automatic DDNS update)	OK
AT+TCPTERM=2,"mypsswd",1024,30 (set TCP Terminal password to "mypsswd",port 1024 and timeout 30 secs )	OK
AT+TCPTERM=1 (enable TCP Terminal)	OK

## 5. Perform Remote program update by sending Command over SMS

To download update file from [ftp.maestro.com](ftp://ftp.maestro.com), directory "update", filename "MSP.dwl", login id : USER, password : PASSWORD

(Remember to enter AT+SMSAT=1 to enable AT command over SMS first, default key = "000000")

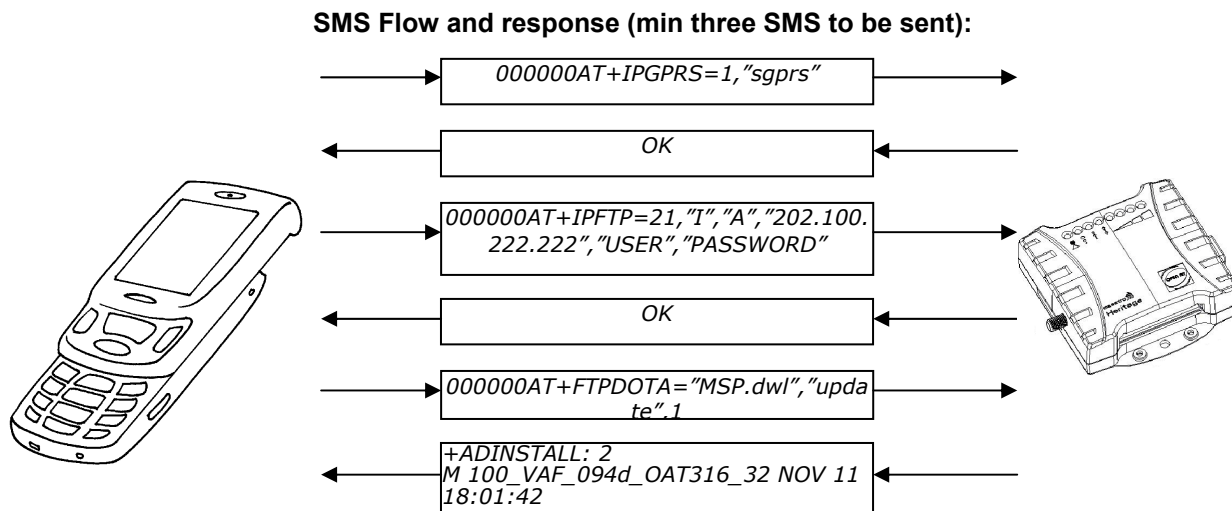

## 6. Command String programming example 1

### Output port power-up status settings

To set Output Port #1, #3 and #6 to logic 1 (short) 1 minute after power up:

Command String to be entered	Explanation
AT+CSTRSET=0,80,"TM 1 ST 60 TM 1 TR 1 TM 1 SW 1"	Set timer #1 60 seconds countdown on power up and set to trigger Command String #1
AT+CSTRSET=0,1,"OP 1 SW 1 OP 3 SW 1 OP 6 SW 1"	Command String #1 switch Output Port 1,3 and 6 to logic 1

## 7. Command String programming example 2

### Input Port signal counting and triggering

To set if Input Port #1 has a low-to-high signal for three times within 30 seconds, set Output Port #5 to high

Services used: IP #1, CT #1, TM #2, OP #5 ("CS" = Command String)

Command String to be entered	Explanation
AT+CSTRSET=0,6,"OP 5 SW 1 CT 1 RS 0"	CS6 : OP #5 set to 1, Counter#1 reset 0
AT+CSTRSET=0,5,"CT 1 RS 0 TM 2 ST 30 TM 2 SW 0"	CS5: Counter#1 reset 0, set Timer #2 to 30 sec and stops it.
AT+CSTRSET=0,4,"CT 1 IN 1 TM 2 SW 1"	CS4: increment Counter #1 by 1, switch Timer#2 on
AT+CSTR="IP 1 DR 1 IP 1 TH 1 IP 1 TR 4 CT 1 ST 3 CT 1 TR 6 TM 2 ST 30 TM 2 TR 5"	Set Input#1 low-to-high, 100mS threshold, trigger CS4, Set Counter #1 trigger value to 3, trigger CS#6 Set Timer#2 to 30 secs, trigger CS5

Confidential, the whole present document is the sole property of Maestro Wireless Solutions Limited.

## 8. Command String programming example 3

### Input Port signal SMS triggering

To set if Input Port #1 has a low-to-high signal and last for 0.5 seconds, send a SMS to phone book number 1 to tell Input Pins status

Services used: IP #1 (“CS” = Command String)

Command String to be entered	Explanation
AT+CSTRSET=0,2,"SM 1 SN PIN_1_HIGH_IP_STATUS:_%IP"	CS2 : send SMS to phone #1 with content "PIN_1..."
AT+CSTR="IP 1 DR 0 IP 1 TH 5 IP 1 TR 2"	Input#1 low-to-high, 50mS threshold, trigger CS2,

## 9. Command String programming example 4

### Input Port signal counting and triggering

To set if Input Port #1 has a low-to-high signal and last for 0.5 seconds, send an email with config set with EM#1

Services used: EM #1, IP #2 (“CS” = Command String)

AT Cmd/Command String to be entered	Explanation
AT+IPGPRS=1,"INTERNET"	Setup GPRS
AT+IPSMTP=25,0,"smtp.netowrk.com"	Setup SMTP server
AT+EMADDR=0,0,"me@netowrk.com"	Setup sender address
AT+EMADDR=0,1,to_1@netowrk.com , to_2@network.com"	Setup recipient address
AT+EMADDR=0,2,"cc_1@netowrk.com , cc_2@network.com"	Setup cc recipient address
AT+EMADDR=0,3,"bcc_1@netowrk.com , bcc_2@network.com"	Setup bcc recipient address
AT+EMSUBJ=0,1,"Email subj #1"	Setup email subject
AT+CSTR="EM 1 TO 1 EM 1 CC 2 EM 1 BC 3 EM 1 SU 1"	Set EM#1 using TO#1, CC#2, BCC #3, Subj #1
AT+CSTRSET=0,3,"EM 1 SN PIN_1_HIGH_IP_STATUS:_%IP"	CS3: send out email with setting using EM#1with add'l content "PIN_1..."
AT+CSTR="IP 2 DR 0 IP 2 TH 5 IP 2 TR 3"	Set Input#2 low-to-high, 50mS threshold, trigger CS3

## CHAPTER 21: COMMAND STRING QUICK REFERENCE

### ALARM "AL"

Service Id	Operation Type	Argument and Explanation
1 to 5	ST	yy/mm/dd,hh:mm:ss(Date time, 0 to cancel)
	TR	0 to 50 (CS to trigger, 0 to cancel)

### COUNTER "CT"

Service Id	Operation Type	Argument and Explanation
1 to 5	DE	1 to 255 (Decrement)
	IN	1 to 255 (Increment)
	RS	0 (Reset)
	ST	-32768 to 32768 (value to trigger)
	TR	0 to 50 (CS to trigger, 0 to cancel)

### COUNTDOWN TIMER "TM"

Service Id	Operation Type	Argument and Explanation
1 to 10	ST	1 to 2147483647 (Timer initial value)
	SW	0 to 1 (stop or start timer)
	TR	1 to 50 (CS to trigger, 0 to cancel)

### INPUT PORT "IP"

Service Id	Operation Type	Argument and Explanation
1 to 6	DR	0 to 1
101-106		1-63 (trigger direction or I/P sum, multiple I/P)
	MS	1 to 63 (Mask value for multiple I/P, Id 101-106 only)
	TH	1 to 255 (Duration state to trigger unit in 0.1s)
	TR	1 to 50 (CS to trigger, 0 to cancel)

### OUTPUT PORT "OP"

Service Id	Operation Type	Argument and Explanation
1 to 6	SW	0 to 1 (state of Output port)

### SMS "SM"

Service Id	Operation Type	Argument and Explanation
1 to 10	SN	(SMS CONTENT) (variable : %CTn counter value %IP input port value %OP output value %TMn countdown timer value)

**EMAIL "EM"**

Service Id	Operation Type	Argument and Explanation
1 to 10	TO	0-50 (recipient id, 0 to cancel)
	CC	0-50 (cc recipient id, 0 to cancel)
	BCC	0-50 (bcc recipient id, 0 to cancel)
	SU	0-10 (subject id, 0 to cancel)
	BD	0-3 (body/content id, 0 to cancel)
	SN	(additional email content) (variable : %CTn counter value %IP input port value %OP output value %TMn countdown timer value)

**DEVICE POWER CONTROL "PW"**

Service Id	Operation Type	Argument and Explanation
0 to 15	1 (dummy)	1(dummy)